


Hue - cable management guide

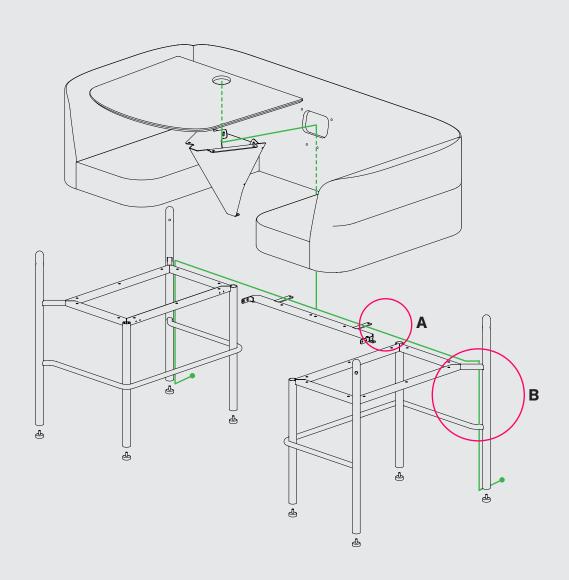

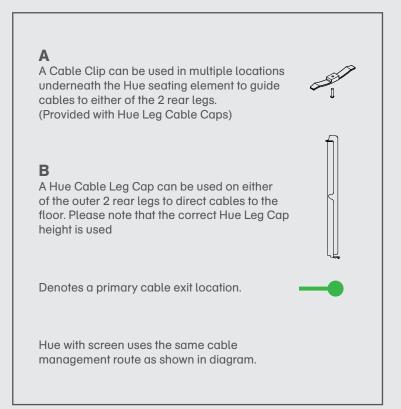



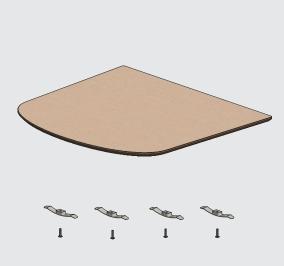


Step 1

The required components for providing Hue with power and cable management. Power unit to specified separately.


Cable clips and fixings are provided when specified with Hue leg cable cap.


Note: For fitting power unit to table top, please see power unit manufacturers fitting instructions.



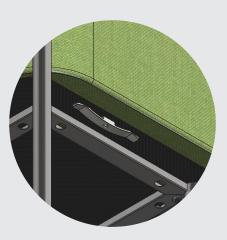

Step 2Fix the cable clips into locations shown.
Align cable clips parralel to metal frame.

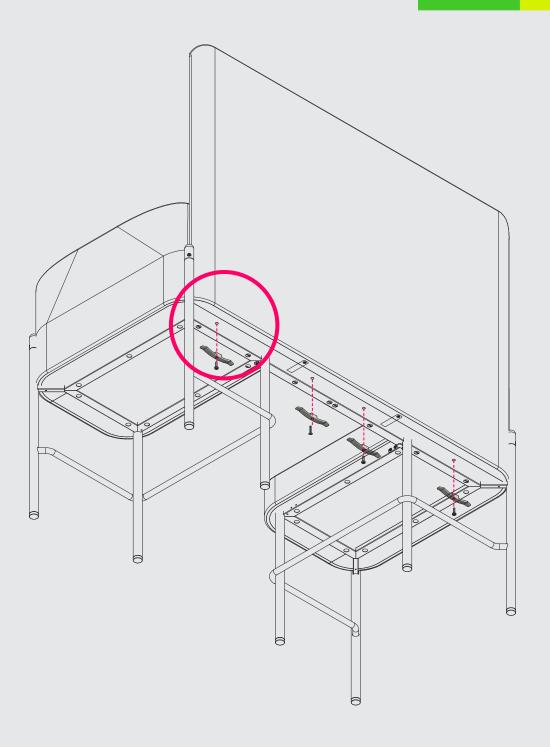

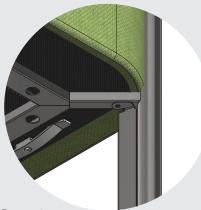

Step 3


Secure Cable Leg Cap into place in location shown. Do not over tighten as the cap needs to move freely.

 
Note: The Cable leg cap can be located at either of the outer rear legs, depending on the required socket location.



Step 4Loosen the adjustable foot and slot Cable Leg Cap over thread.

Note: Fixings should be secure but not overtightened so the Cable Leg Cap can be opened.

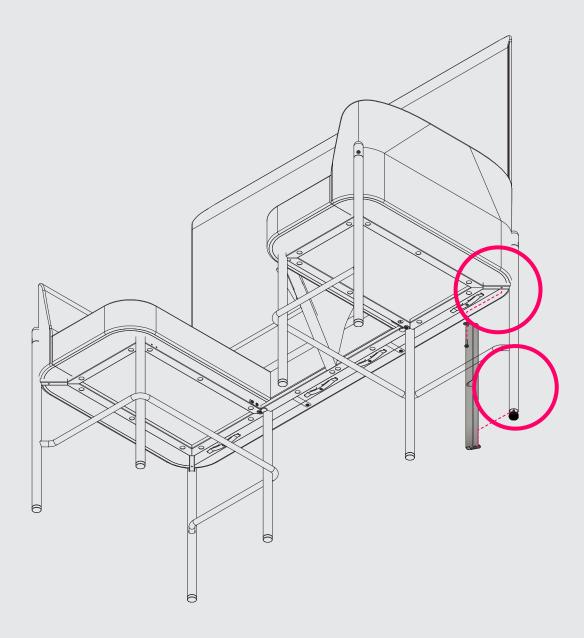


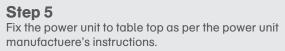





Step 6

 To secure the cable, loop it round the cable clip within the table bracket once. Now feed the rest of the cable through the hole in the plywood frame so it comes trough the bottom of the unit.

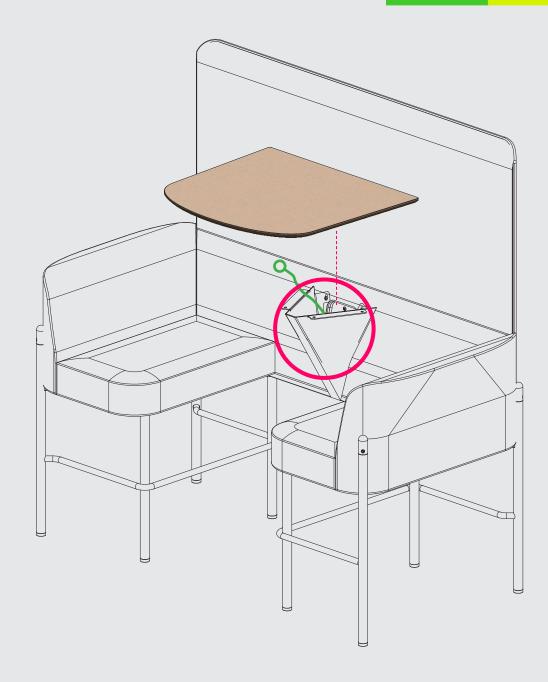

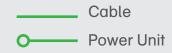

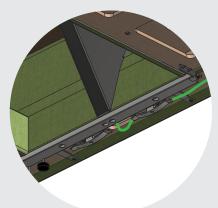

Step 7

After fixing the table top in place (see Hue Assembly Instructions), pull the cable through the hole in the bottom of the plywood frame. Guide the cable through the exterior cable clips towards the cable leg cap.



Step 8Feed cable through cable leg cap.



Step 9

Once cable is in place, close the leg cap and tighten both the upper fixing and adjustable foot to secure the cable leg cap. Now plug the cable into an appropriate socket.

