




Assembly Instructions

Morse Meeting Table

A Table Top		B Table Top and Leaves	
			
MSB320R	MSB324R	MSB330R	MSB330D
Morse Rectangular Meeting Table — 2000w x 1000d	Morse Rectangular Meeting Table — 2400w x 1000d	Morse Rectangular Meeting Table — 3000w x 1000d	Morse Radius Corner Meeting Table — 3000w x 1000d
			
MSB520R	MSB524R	MSB530R	MSB530D
Morse Bar Height Rectangular Meeting Table — 2000w x 1000d	Morse Bar Height Rectangular Meeting Table — 2400w x 1000d	Morse Bar Height Rectangular Meeting Table — 3000w x 1000d	Morse Bar Height Radius Corner Meeting Table — 3000w x 1000d
			
MSC320R	MSC324R	MSC330R	MSC330D
Morse Rectangular Meeting Table — 2000w x 1200d	Morse Rectangular Meeting Table — 2400w x 1200d	Morse Rectangular Meeting Table — 3000w x 1200d	Morse Radius Corner Meeting Table — 3000w x 1200d
			
MSC520R	MSC524R	MSC530R	MSC530D
Morse Bar Height Rectangular Meeting Table — 2000w x 1200d	Morse Bar Height Rectangular Meeting Table — 2400w x 1200d	Morse Bar Height Rectangular Meeting Table — 3000w x 1200d	Morse Bar Height Radius Corner Meeting Table — 3000w x 1200d


ASSEMBLY STEPS

- 1 Build Table Frame
- 2 Basket Options
- 3 Add Power and Data to Basket
- 4 Add Basket to Table Top
- 5 Add Table Top and Leaves
- 6 Cable layouts
- 7 Add Accessories


!	
	
2 X PEOPLE	TX30 BIT
	
13MM SPANNER OR SOCKET	#8 POZIDRIV SCREWDRIVER

Build Table Frame


Morse Meeting Table

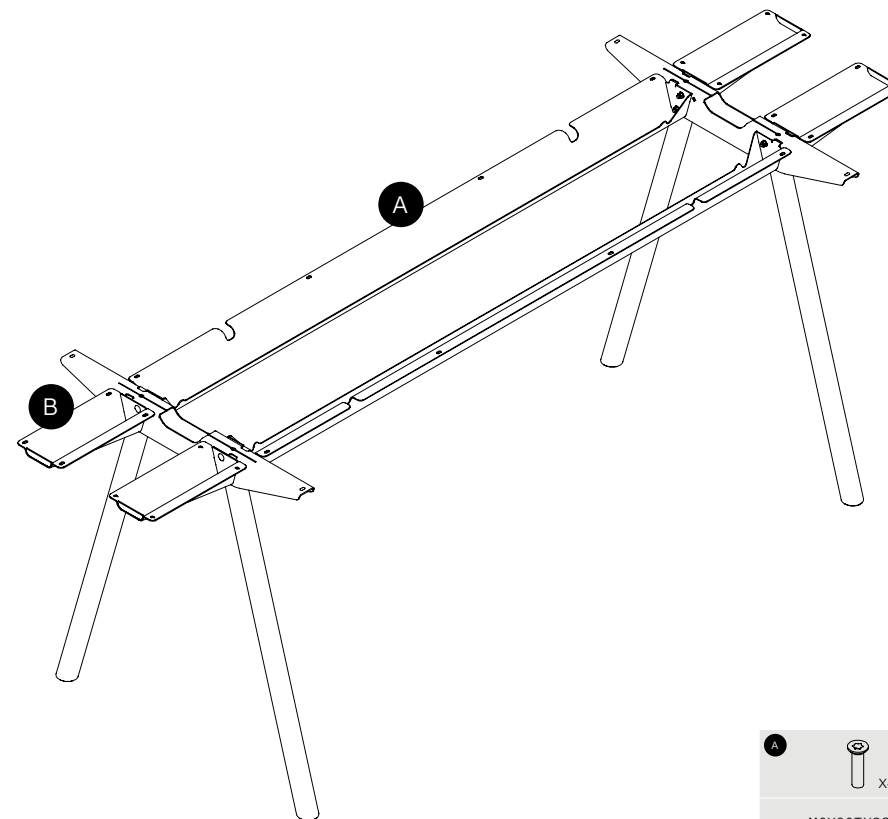

A		X4
	M6X20TXCSPATCH	
A		X8
	M8FLANGENUTSS	
A		X8
	M8X75CARRIAGEBL	
B		X8
	M8FLANGENUTSS	
B		X8
	M8X75CARRIAGEBL	

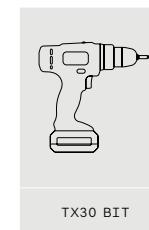



TX30 BIT

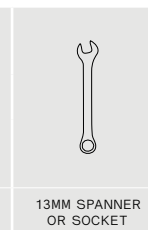

13MM SPANNER OR SOCKET



1

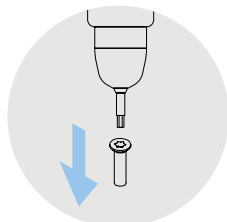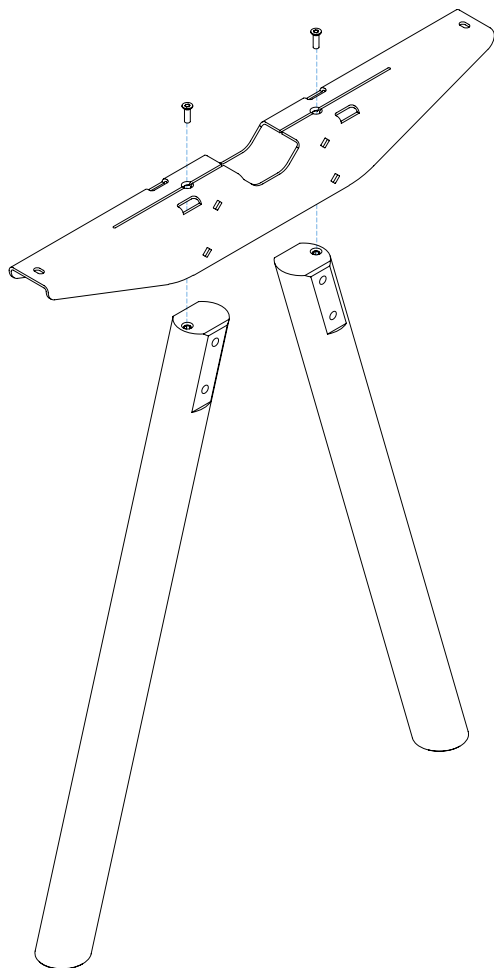


X1 PER LEG

M6X20TXCSPATCH


A

2

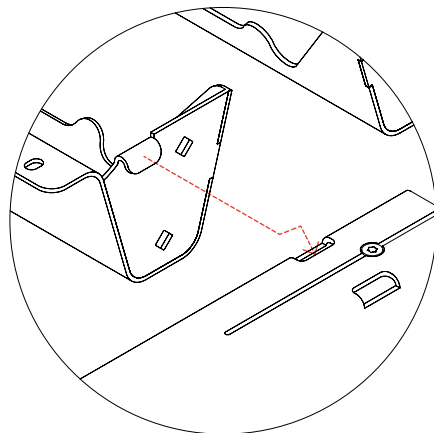

A

3

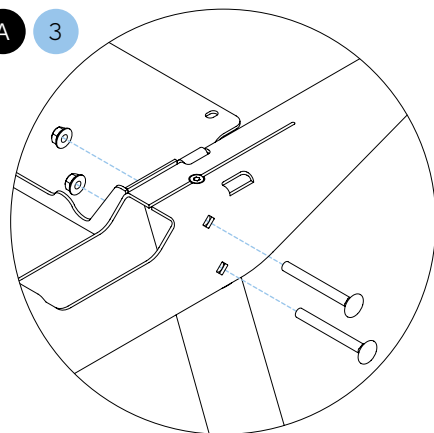



X8

M8FLANGENUTSS




X8


M8X75CARRIAGEBL

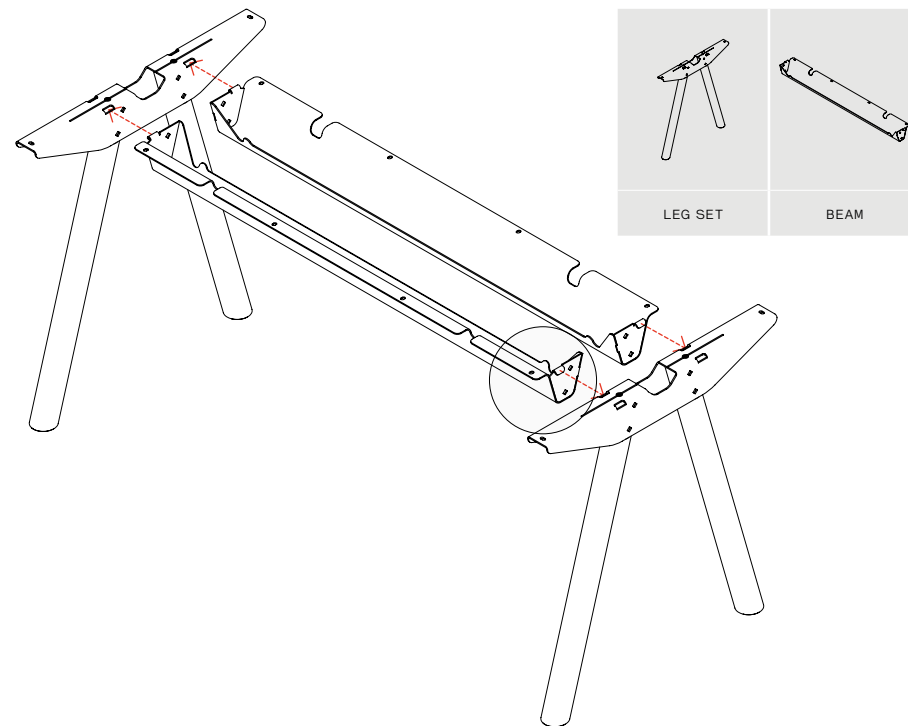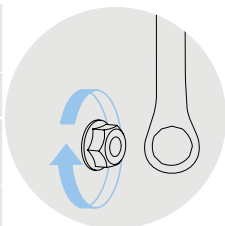


LEG SET

BEAM


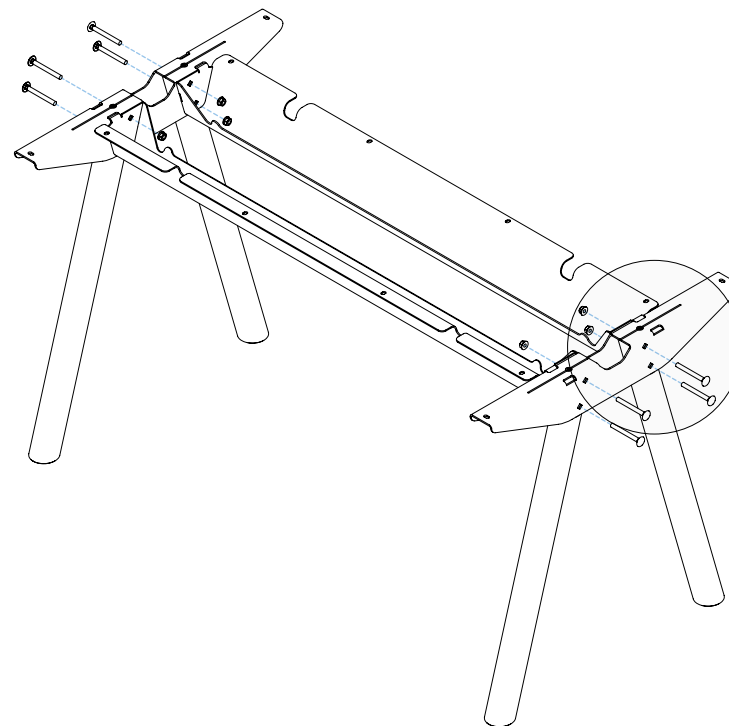


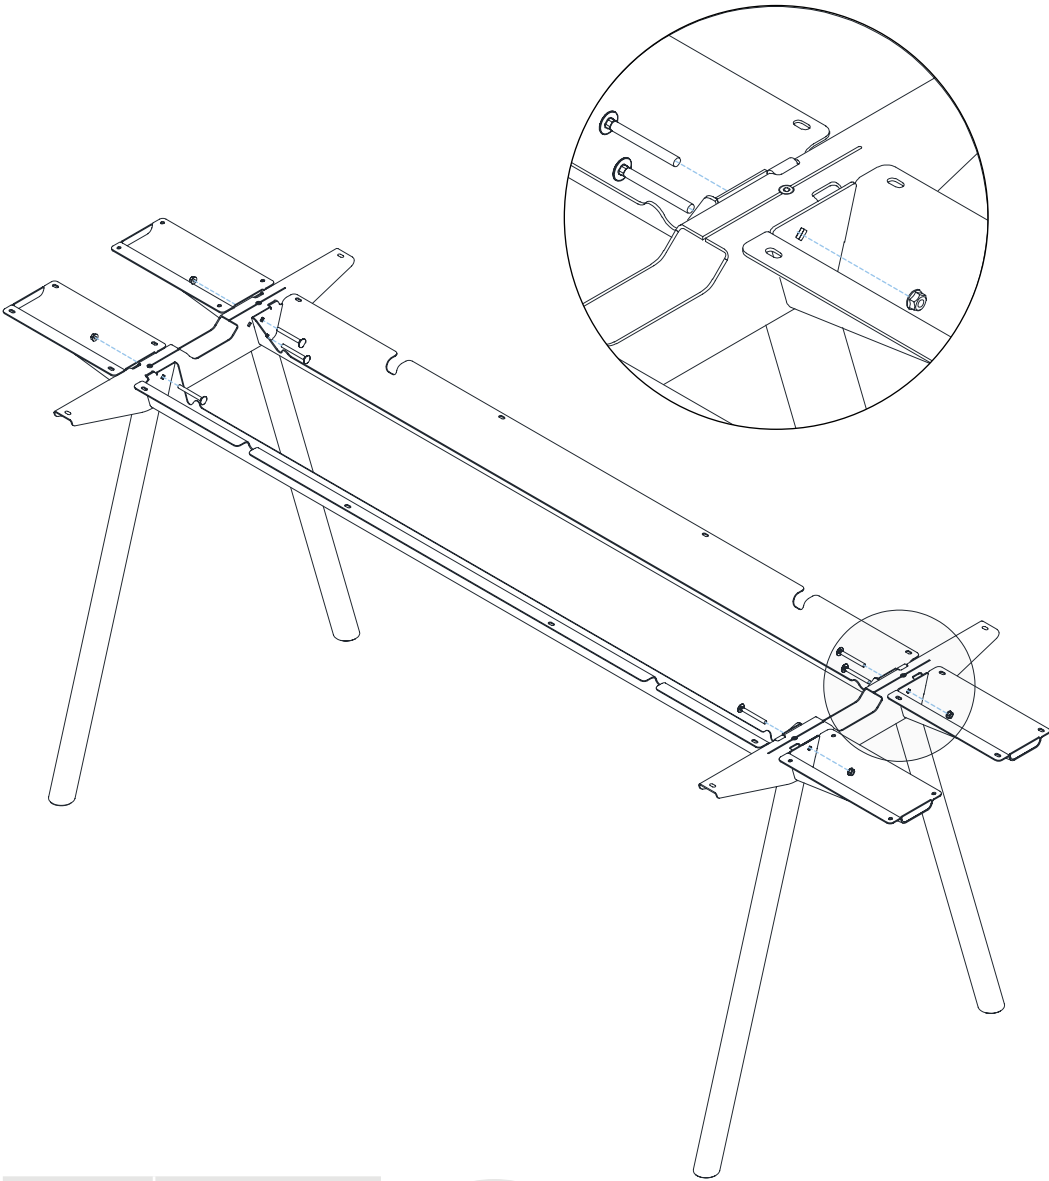





	 X2 PER LEAF SUPPORT
	M8FLANGENUTSS
	 X2 PER LEAF SUPPORT
LEAF SUPPORT	M8X75CARRIAGEBL

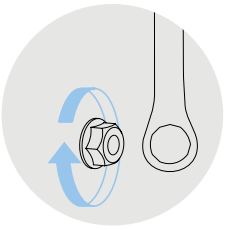


A Basket Options Morse Meeting Table

			
MSB320R	MSB520R	MSC320R	MSC520R
Morse Rectangular Meeting Table	Morse Bar Height Rectangular Meeting Table	Morse Rectangular Meeting Table	Morse Bar Height Rectangular Meeting Table
– 2000w x 1000d	– 2000w x 1000d	– 2000w x 1200d	– 2000w x 1200d
Basket Short	Basket Short	Basket Short	Basket Short








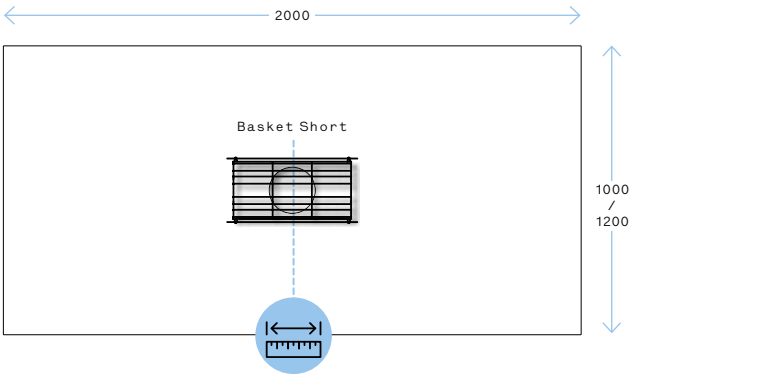



			
MSB324R	MSB524R	MSC324R	MSC524R
Morse Rectangular Meeting Table	Morse Bar Height Rectangular Meeting Table	Morse Rectangular Meeting Table	Morse Bar Height Rectangular Meeting Table
– 2400w x 1000d	– 2400w x 1000d	– 2400w x 1200d	– 2400w x 1200d
Basket Long	Basket Long	Basket Long	Basket Long

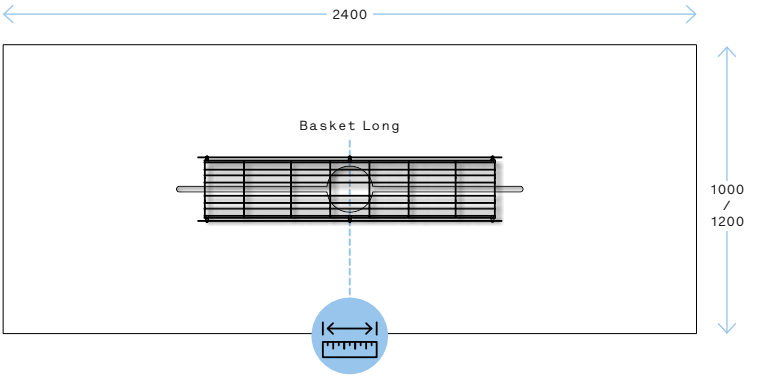

B Basket Options


Morse Meeting Table

			
MSB330R Morse Rectangular Meeting Table — 3000w x 1000d	MSB530R Morse Bar Height Rectangular Meeting Table — 2000w x 1000d	MSC330R Morse Rectangular Meeting Table — 3000w x 1200d	MSC530R Morse Bar Height Rectangular Meeting Table — 3000w x 1200d
Basket Long + Basket Short	Basket Long + Basket Short	Basket Long + Basket Short	Basket Long + Basket Short
			
MSB330D Morse Radius Corner Meeting Table — 3000w x 1000d	MSB530D Morse Bar Height Radius Corner Meeting Table — 3000w x 1000d	MSC330D Morse Radius Corner Meeting Table — 3000w x 1200d	MSC530D Morse Bar Height Radius Corner Meeting Table — 3000w x 1200d
Basket Long + Basket Short	Basket Long + Basket Short	Basket Long + Basket Short	Basket Long + Basket Short

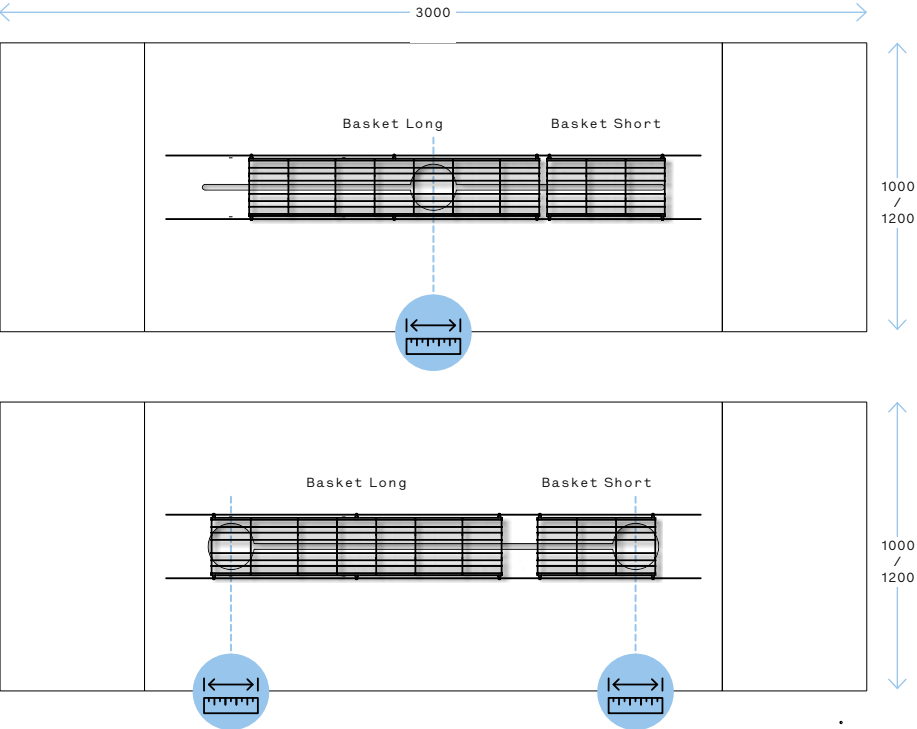


Add Power & Data to Basket




Morse Meeting Table

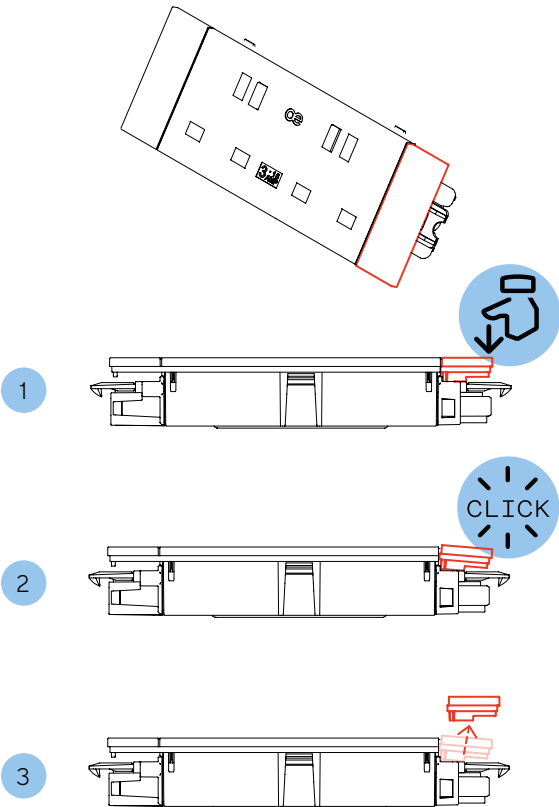


STEP
3

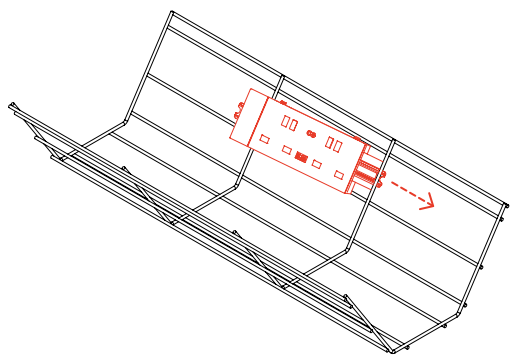



4

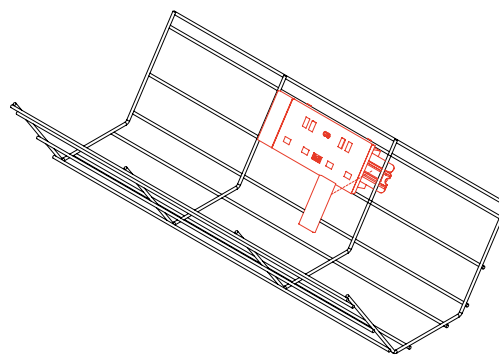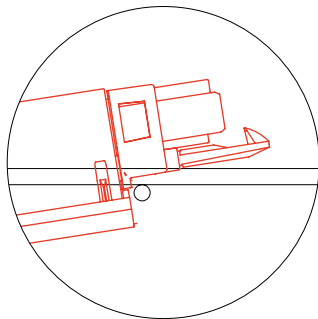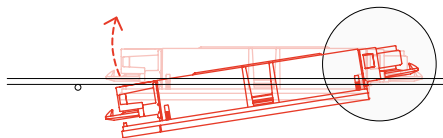



7

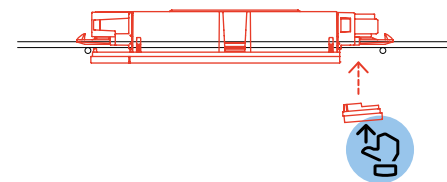


8

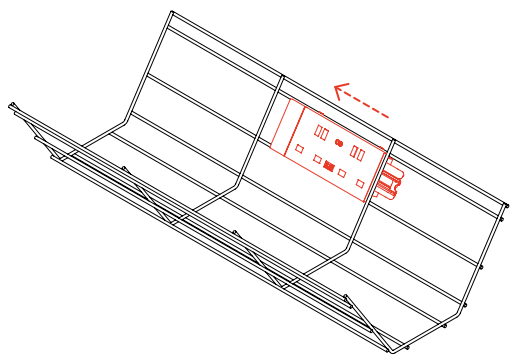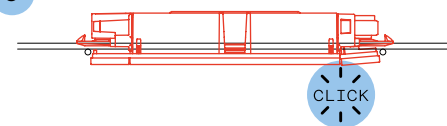


5

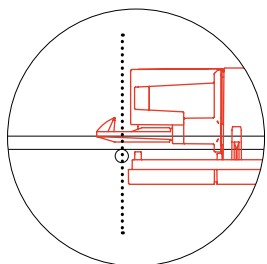


6

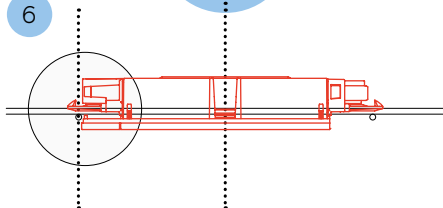


9

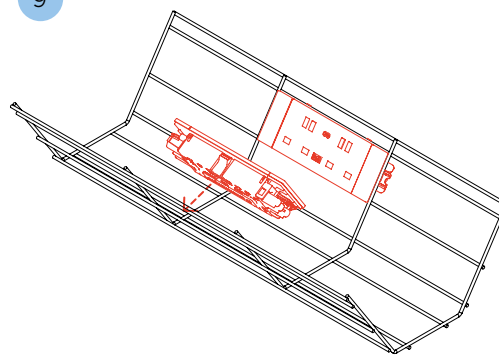

10

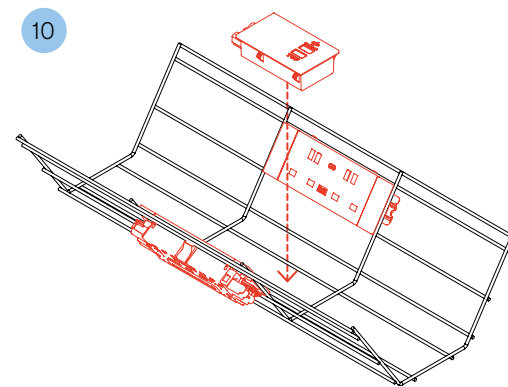


Add Basket to Table Top Morse Meeting Table

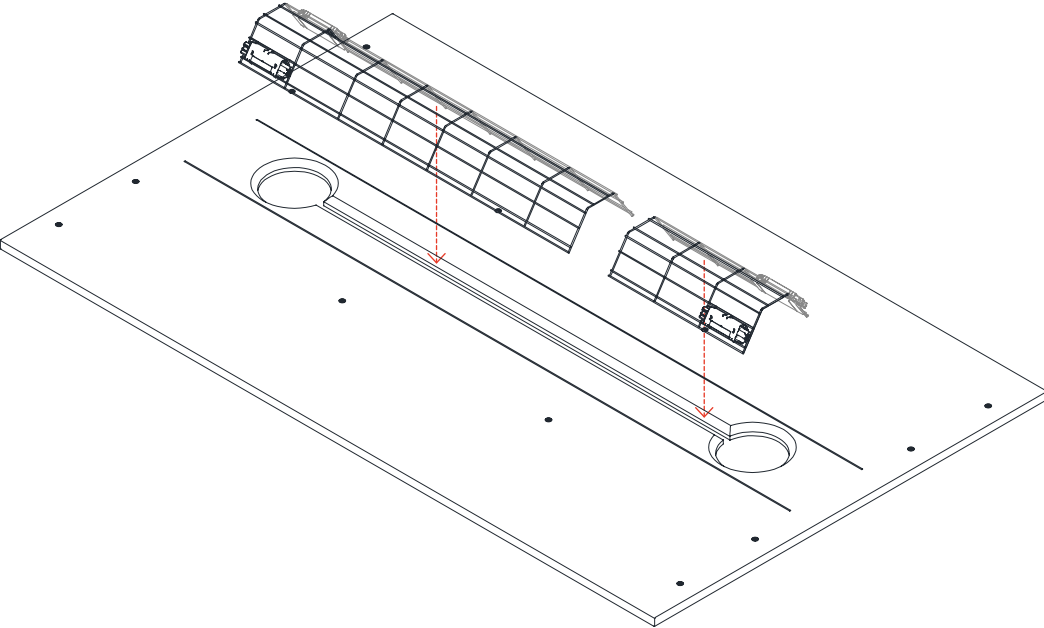


STEP
4




	 X4 PER BASKET
	PCLIP48ALU
	 X4 PER BASKET
#8 POZIDRIV SCREWDRIVER	4X16PANWOODSCREW

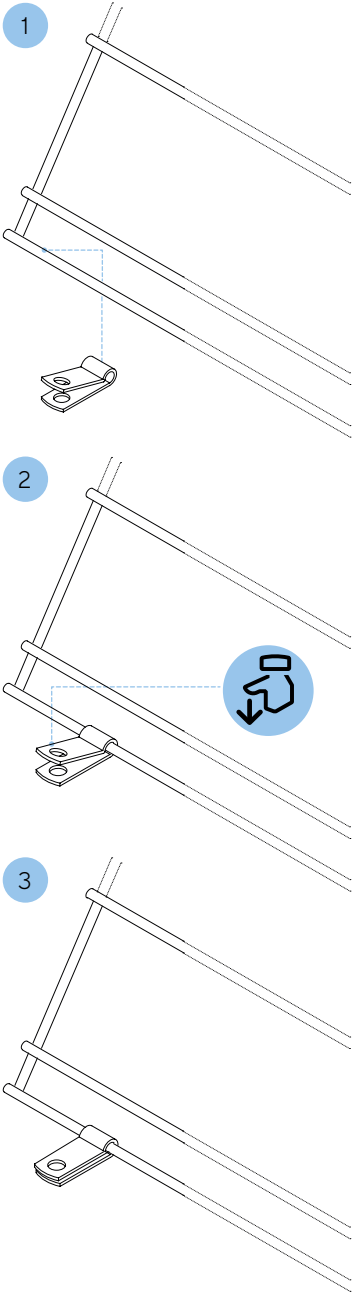

 X4 PER BASKET
PCLIP48ALU

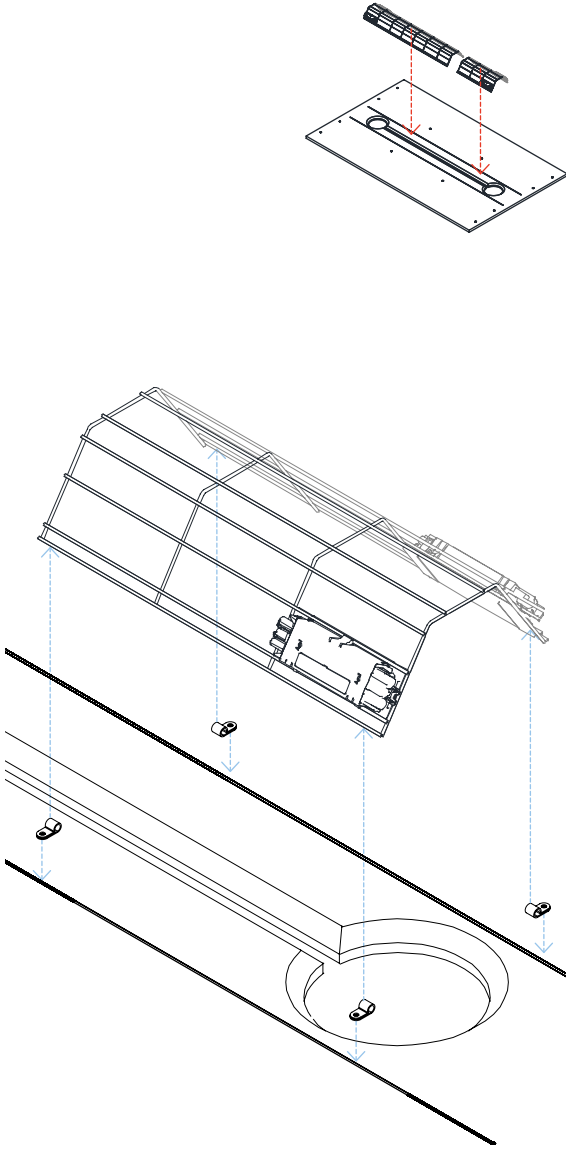


4

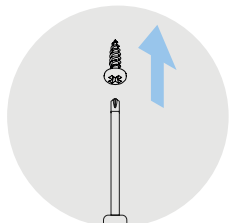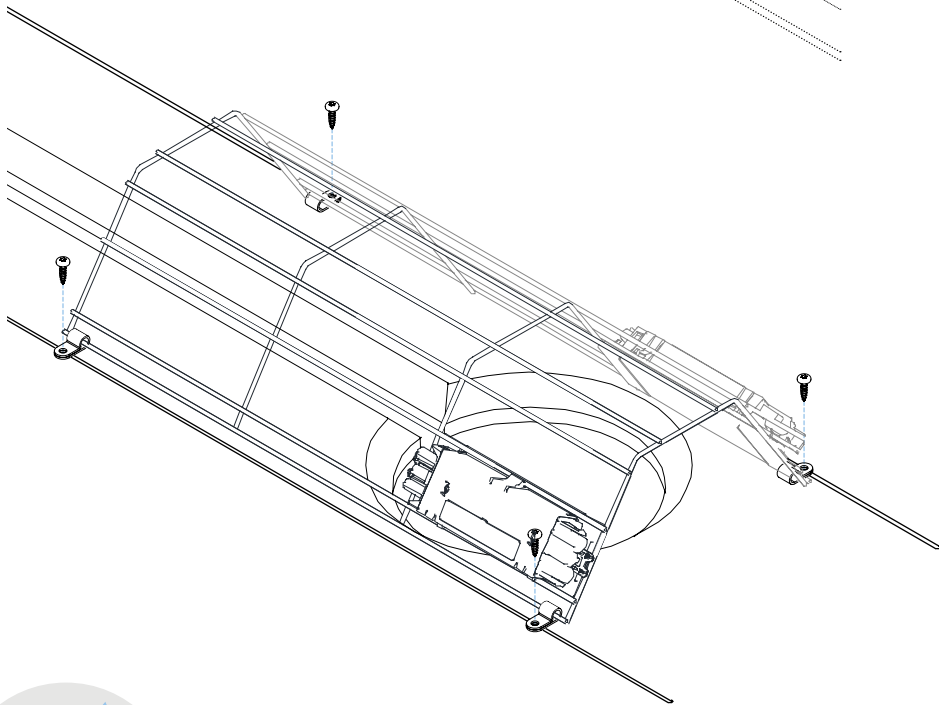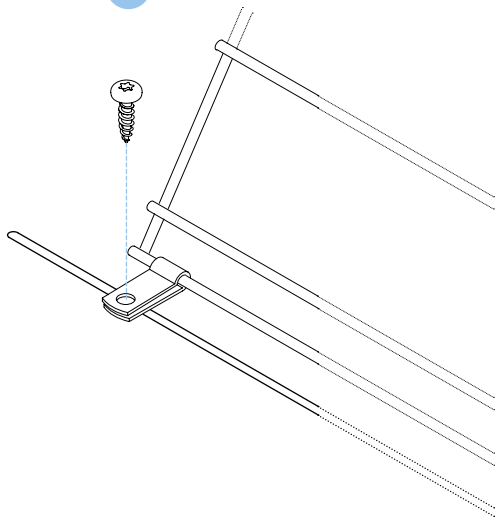



X4 PER BASKET

4X16PANWOODSCREW



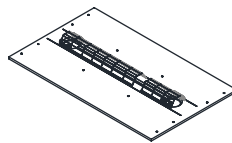


Add **A** Table Top and **B** Leaves Morse Meeting Table

A

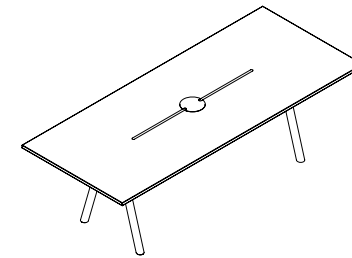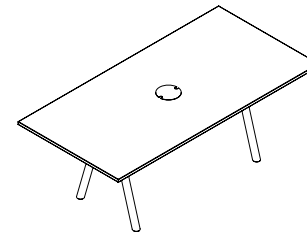

B

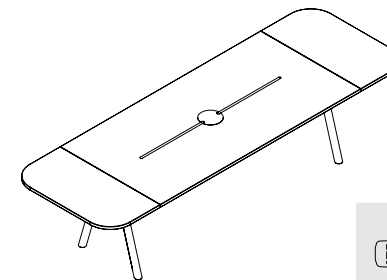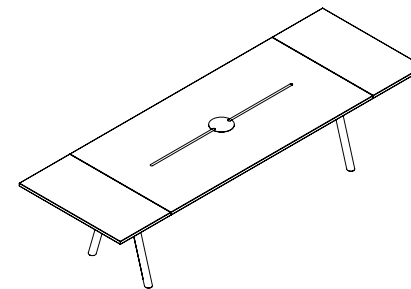

TX30 BIT

A

X12

M6X16TXFLANGE

B

X4

BRACE CLIP

B



X32

M6X16TXFLANGE

STEP

5



A 1

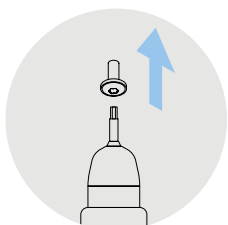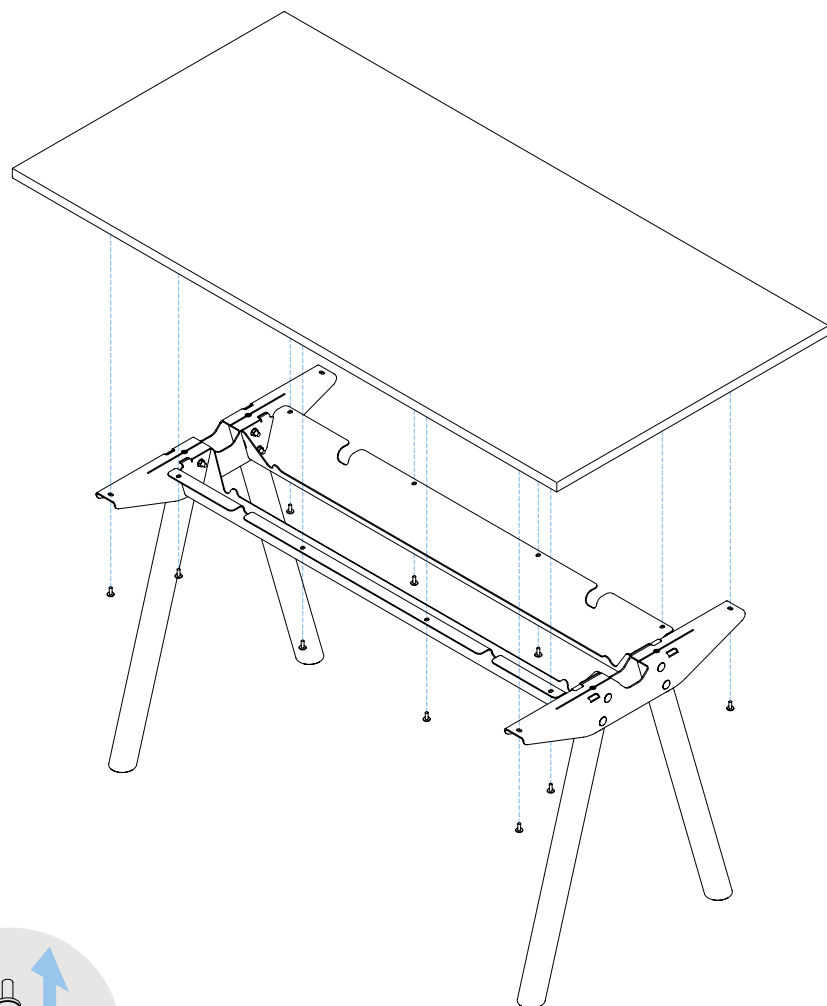

X12

M6X16TXFLANGE

B 1

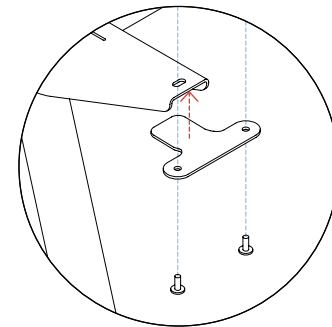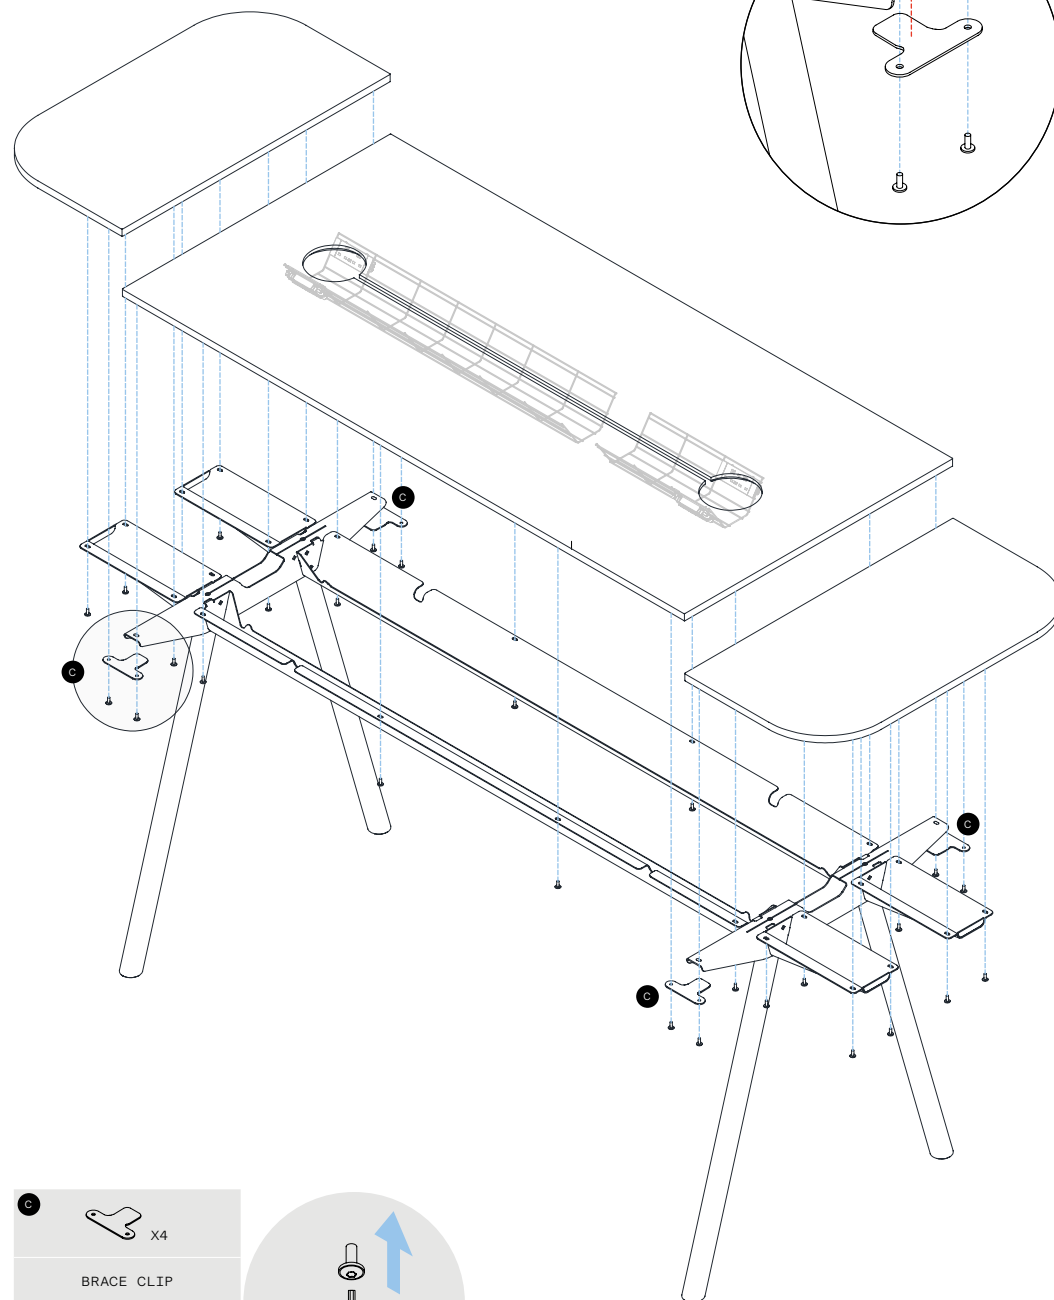

C




X4

BRACE CLIP




X32

M6X16TXFLANGE

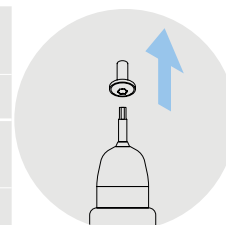


Cable layouts Morse Meeting Table

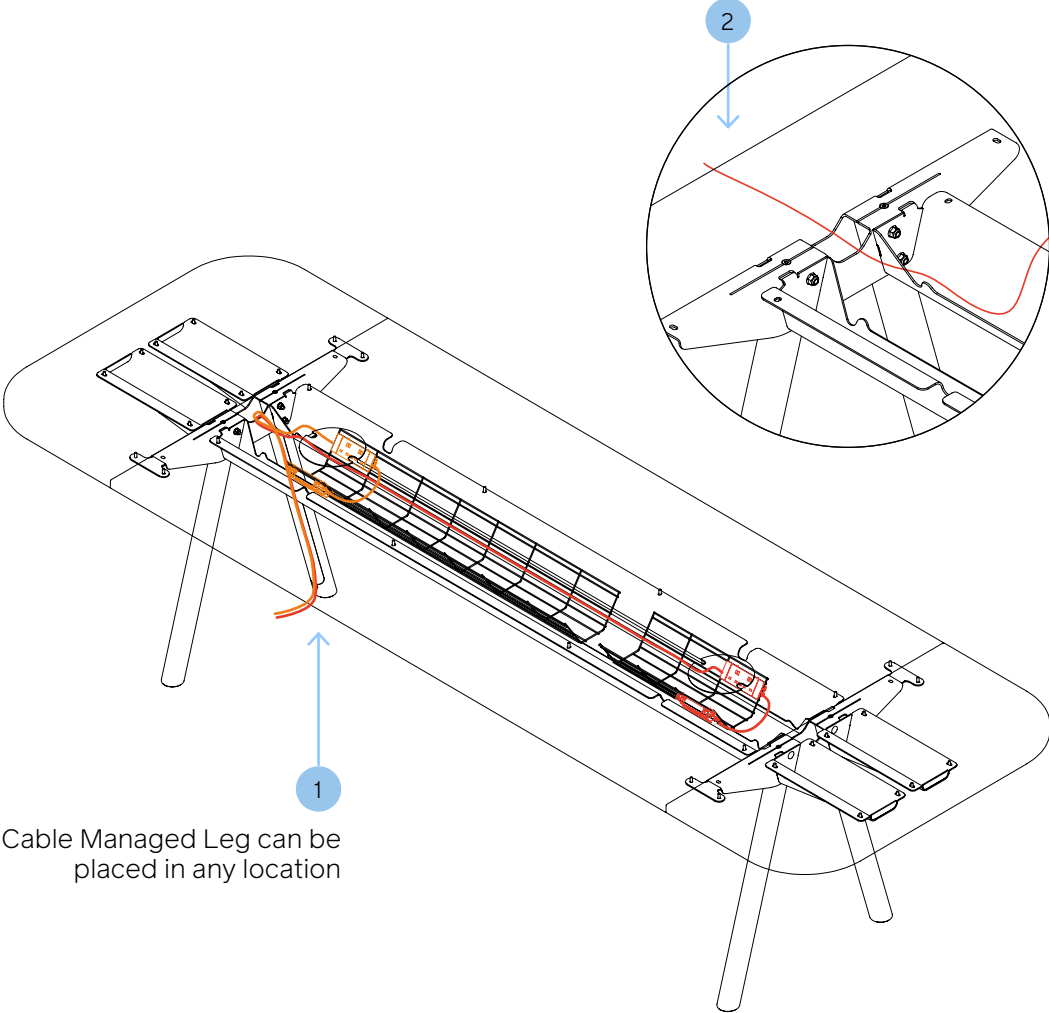

STEP
6

Add Accessories Morse Table

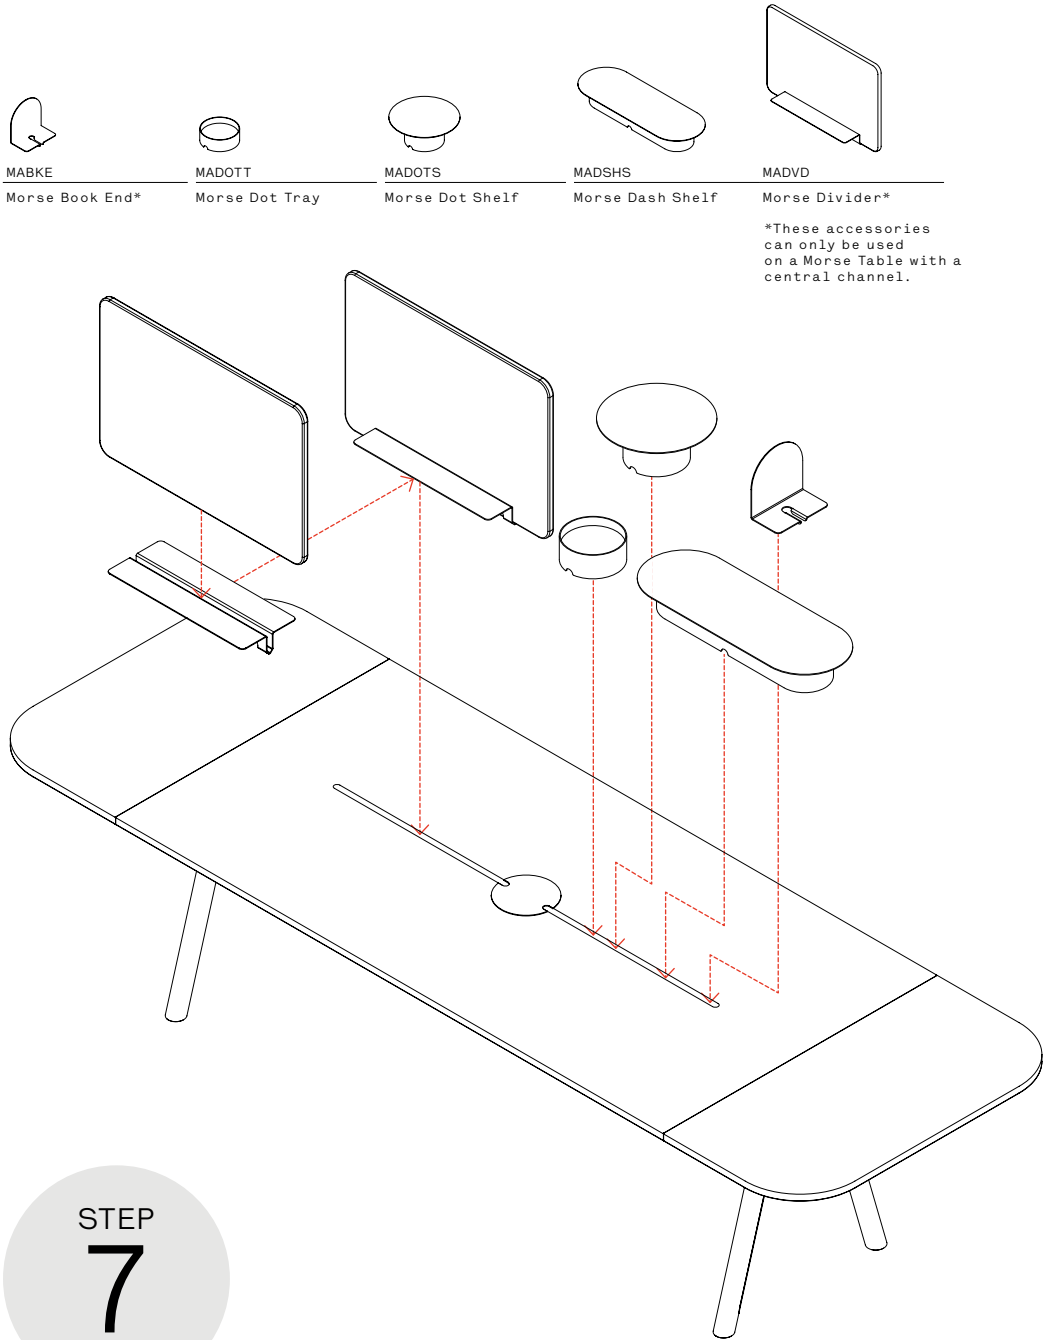

STEP
7