










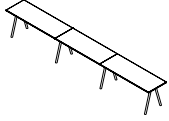


Assembly Instructions

Morse Work Table 800d


A 4 Legs		B 6 & 8 Legs							
									
MSAC316	MSAC324	MSAG328	MSAG336	MSAG340	MSAG344	MSAG348	MSAG356	MSAG364	
Morse Work Table – 1600w x 800d – 4 leg	Morse Work Table – 2400w x 800d – 4 leg	Morse Work Table – 2800w x 800d – 6 leg	Morse Work Table – 3600w x 800d – 6 leg	Morse Work Table – 4000w x 800d – 8 leg	Morse Work Table – 4400w x 800d – 6 leg	Morse Work Table – 4800w x 800d – 8 leg	Morse Work Table – 5600w x 800d – 8 leg	Morse Work Table – 6400w x 800d – 8 leg	
									
MSAC516	MSAC524	MSAG528	MSAG536	MSAG540	MSAG544	MSAG548	MSAG556	MSAG564	
Morse Bar Height Work Table – 1600w x 800d – 4 leg	Morse Bar Height Work Table – 2400w x 800d – 4 leg	Morse Bar Height Work Table – 2800w x 800d – 6 leg	Morse Bar Height Work Table – 3600w x 800d – 6 leg	Morse Bar Height Work Table – 4000w x 800d – 8 leg	Morse Bar Height Work Table – 4400w x 800d – 6 leg	Morse Bar Height Work Table – 4800w x 800d – 8 leg	Morse Bar Height Work Table – 5600w x 800d – 8 leg	Morse Bar Height Work Table – 6400w x 800d – 8 leg	

ASSEMBLY STEPS

- 1
- Build Table Frame
- 2
- Add Table Top
- 3
- Add Accessories



2 X PEOPLE



TX30 BIT




13MM SPANNER OR SOCKET




#8 POZIDRIV SCREWDRIVER


Build Table **A** Frame
Morse Work Table 800d
4 Leg

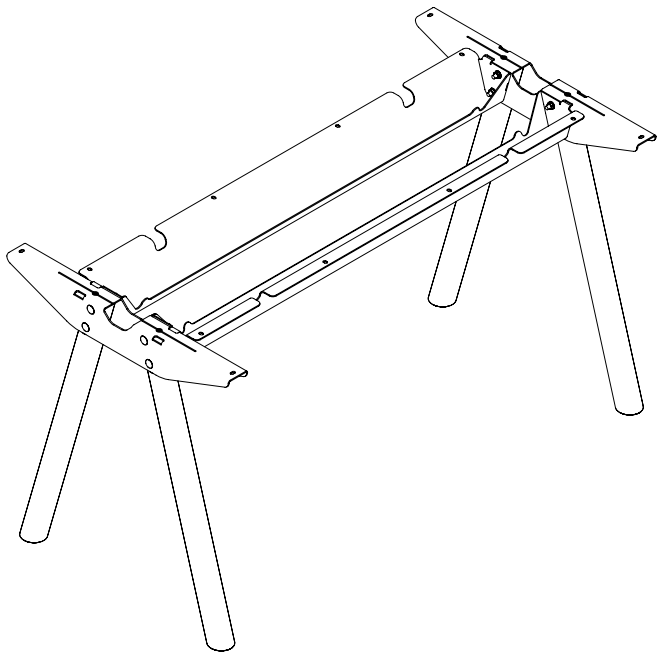

STEP
1

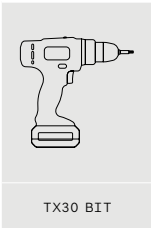



TX30 BIT

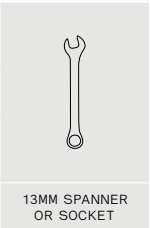


13MM SPANNER
OR SOCKET

	X4
M6X20TXCSPATCH	
	X8
M8FLANGENUTSS	
	X8
M6X25TXCSPATCHBL	

Build Table **B** Frame
Morse Work Table 800d
6 & 8 Leg

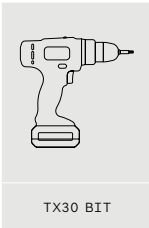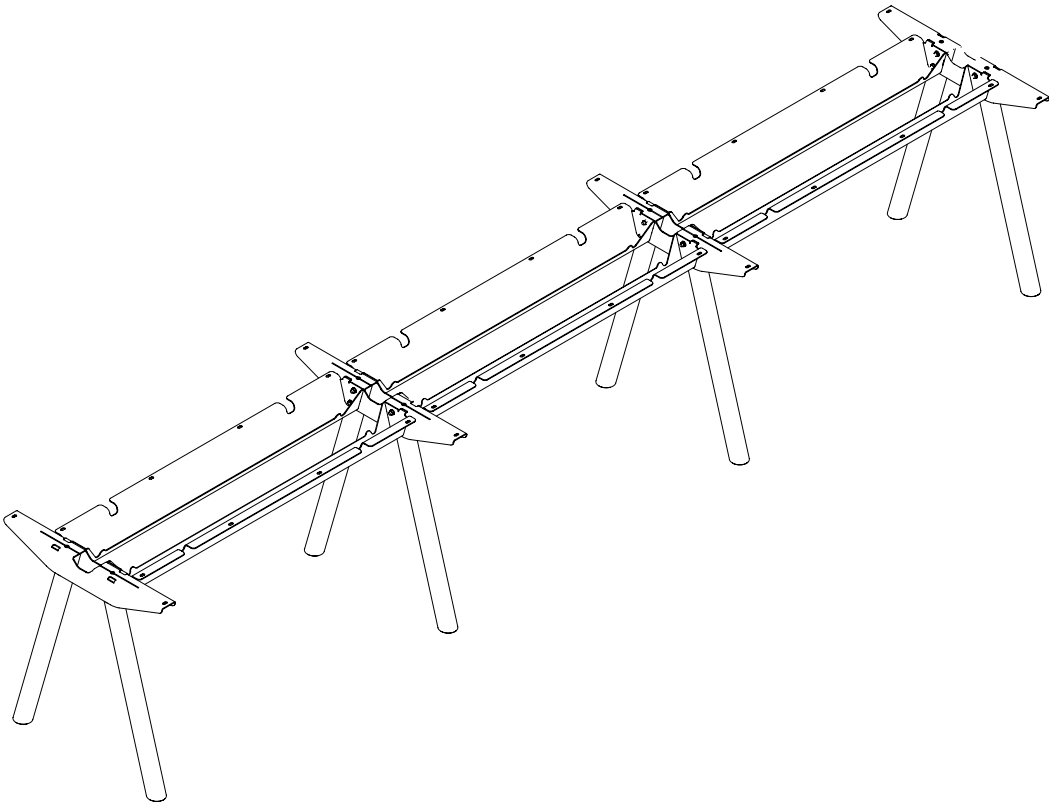



TX30 BIT

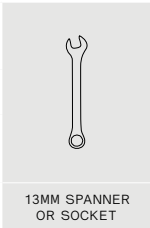

13MM SPANNER
OR SOCKET

	X2 PER LEG SET
M6X20TXCSPATCH	
	X4 PER LEG SET
M8FLANGENUTSS	
	X4 LEG SET
M6X25TXCSPATCHBL	

1

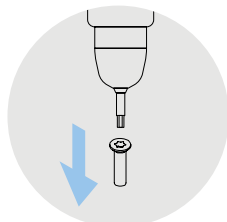
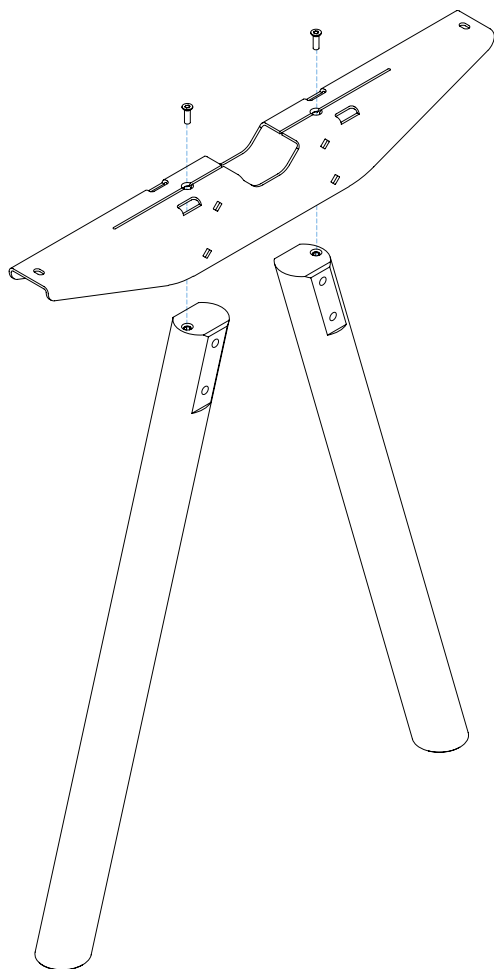


X1 PER LEG

M6X20TXCSPATCH

A

2

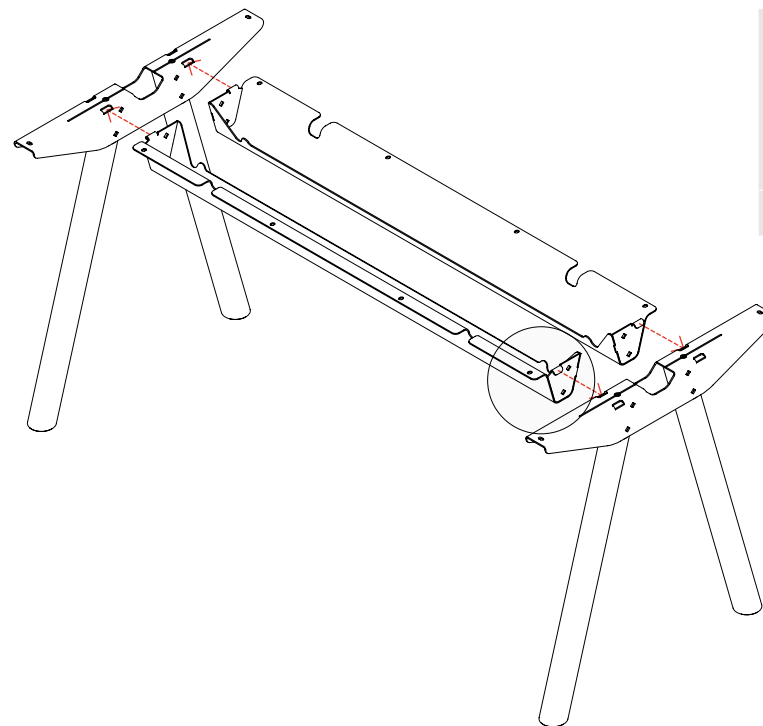
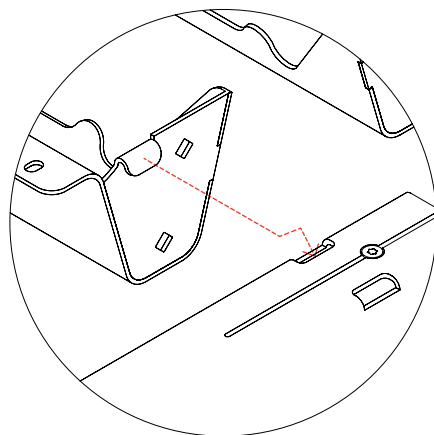


LEG SET

BEAM

A

3

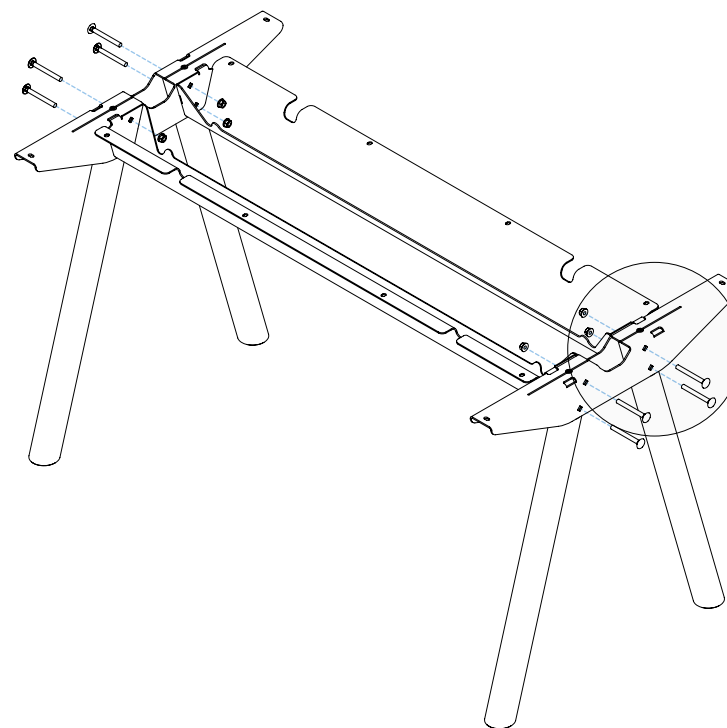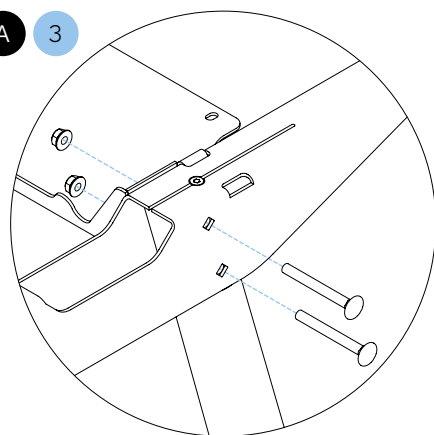


X8

M8FLANGENUTSS






X8



M8X75CARRIAGEBL

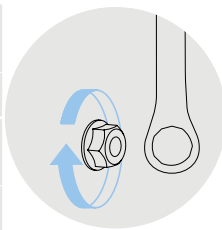


B 2

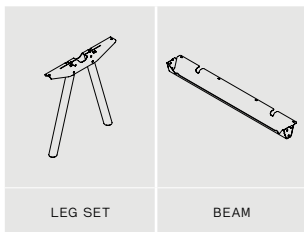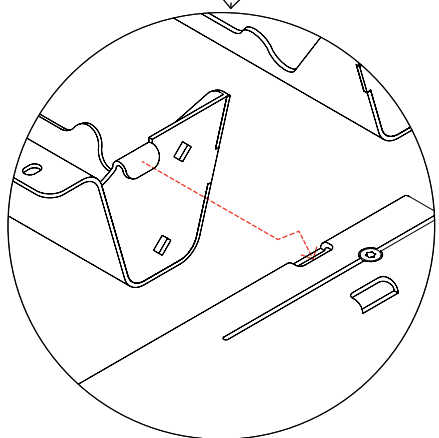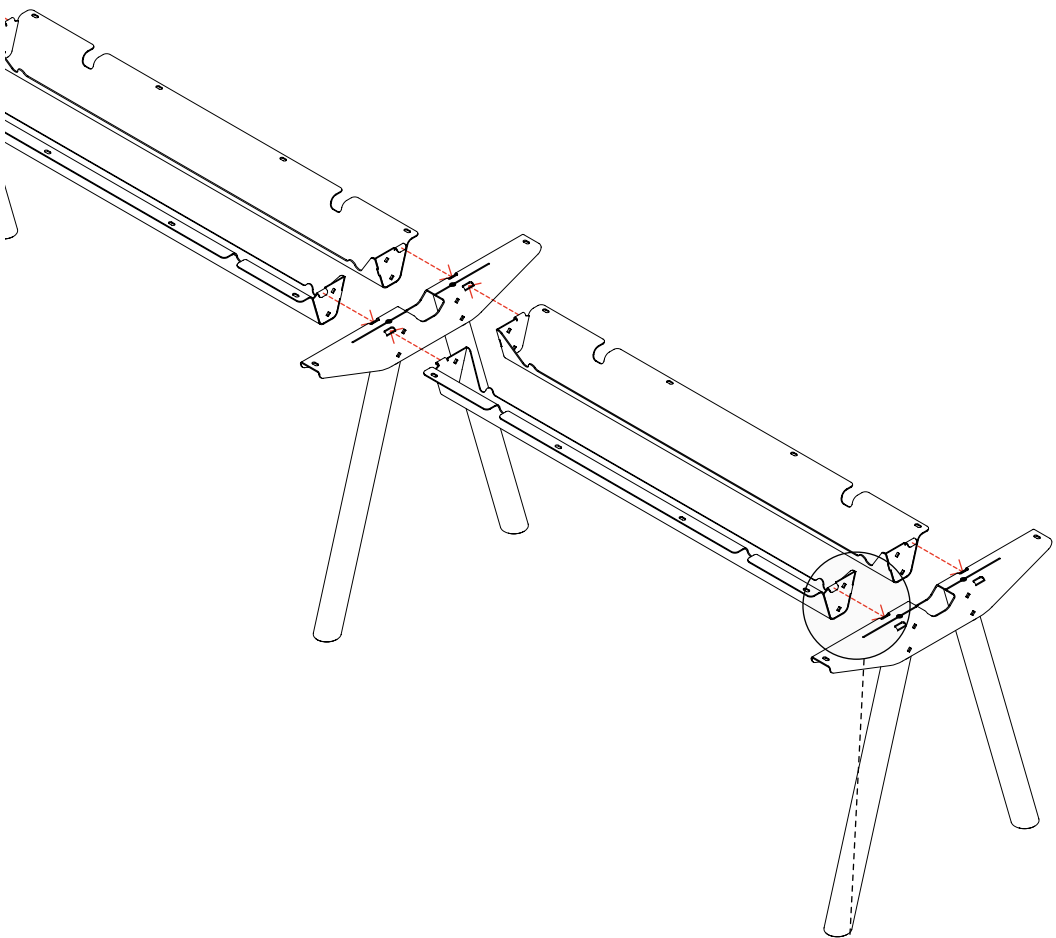



B 3

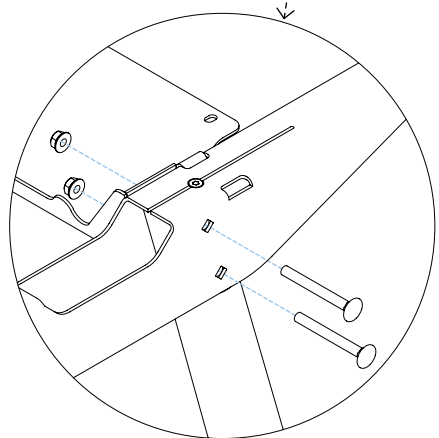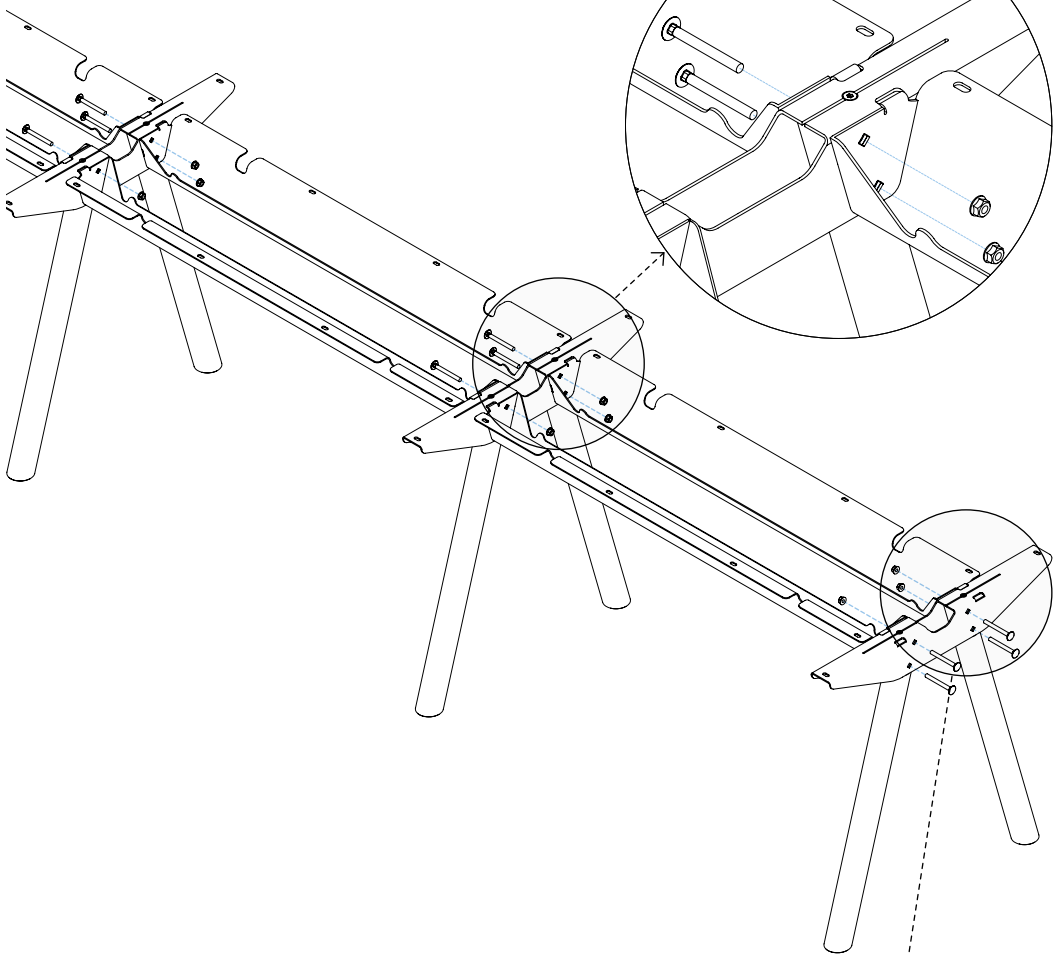

-  X4 PER LEG SET
- M8FLANGENUTSS
-  X4 PER LEG SET
- M8X75CARRIAGEBL

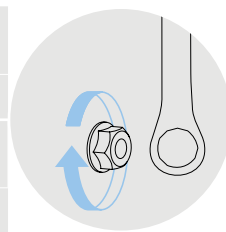

Add **A** Table Top
Morse Meeting Table 800d
4 Legs

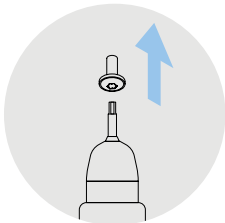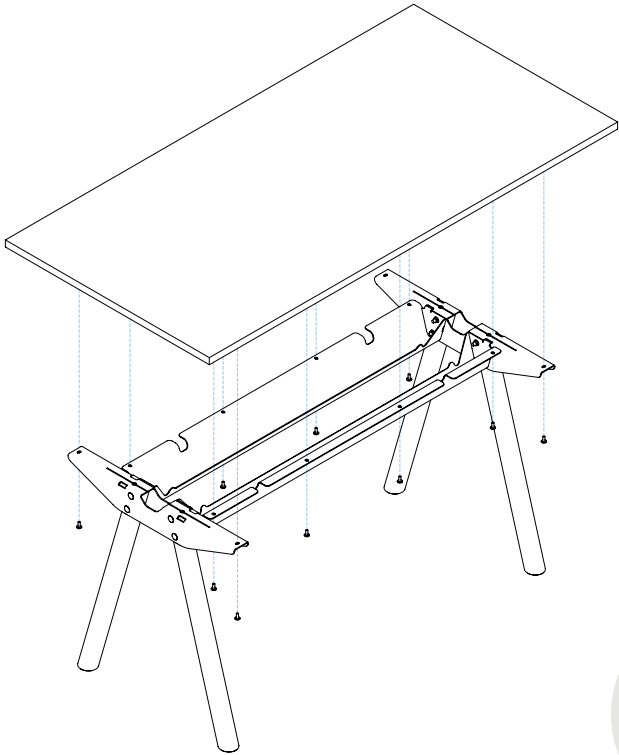


X12

M6X16TXFLANGE





TX30 BIT

STEP
2

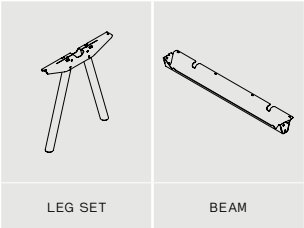


Add **B** Table Top
Morse Meeting Table 800d
6 & 8 Legs

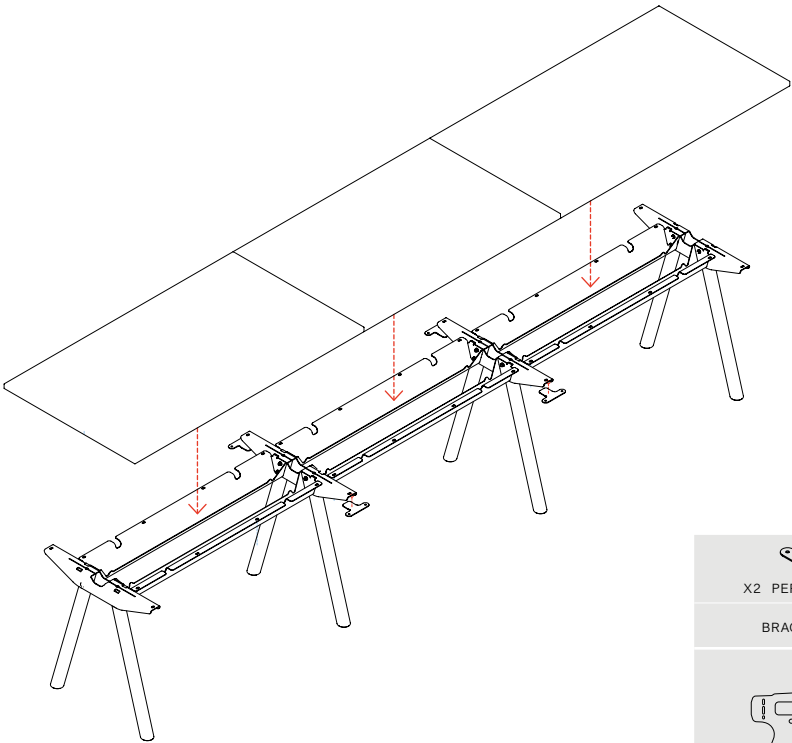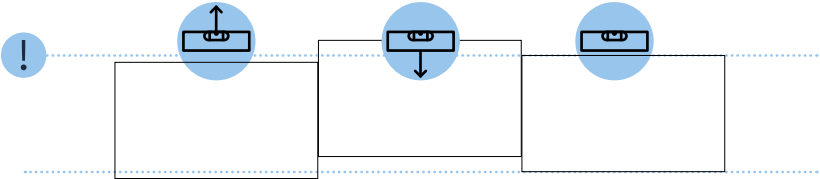


X2 PER LEG SET


BRACE CLIP



TX30 BIT

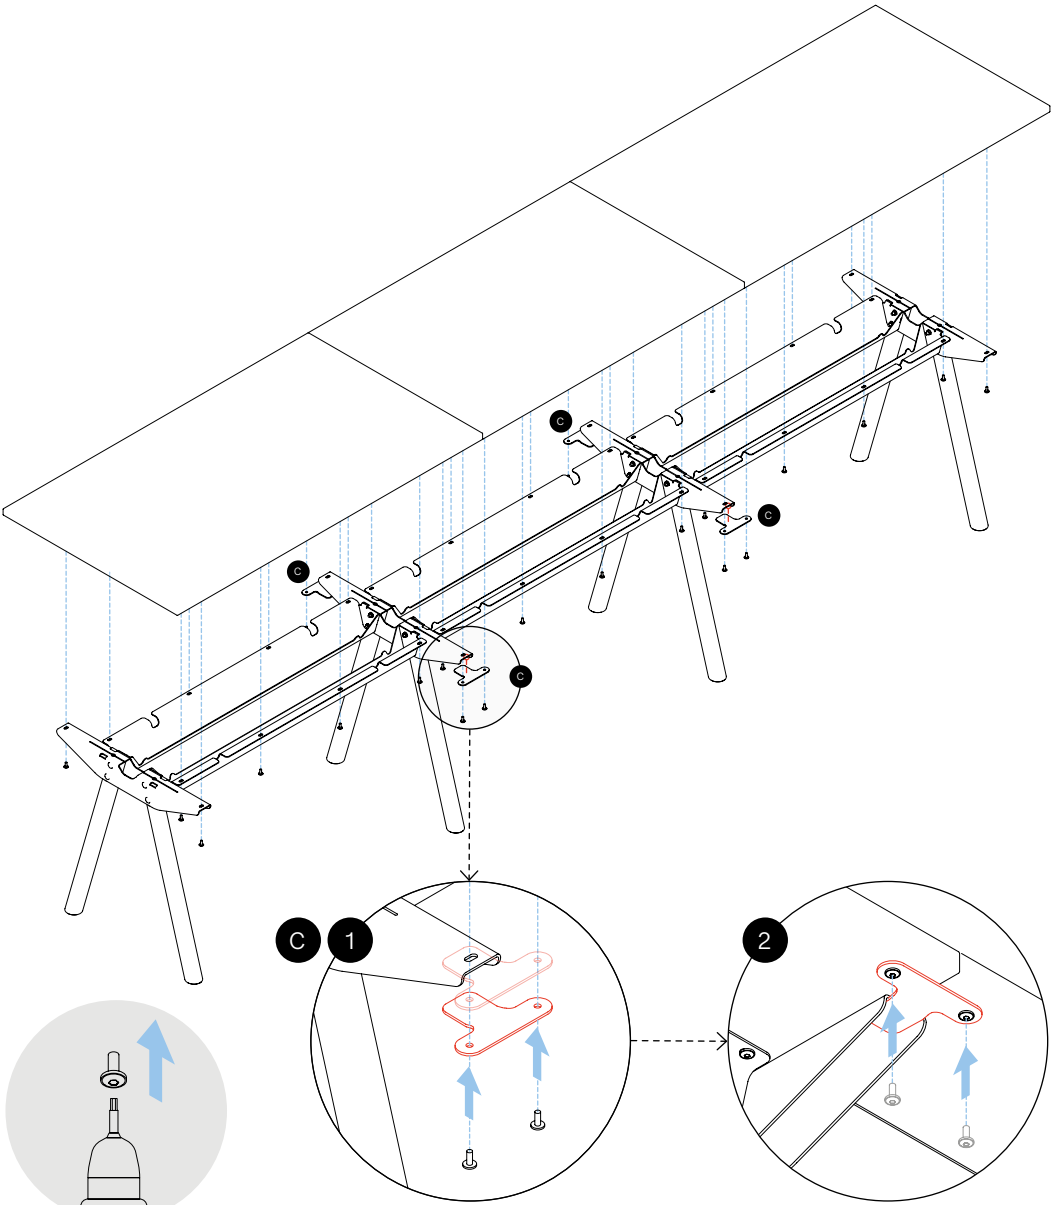


C		
X2 PER LEG SET		X2 PER BEAM CLIP
BRACE CLIP		M6X16TXFLANGE
	X2 PER LEG SET	
M6X16TXFLANGE		X4 PER BEAM
		M6X16TXFLANGE

		
LEG SET	BEAM	BRACE CLIP

Add Accessories Morse Table

		
MADOTT	MADOTS	MADSHS
Morse Dot Tray	Morse Dot Shelf	Morse Dash Shelf

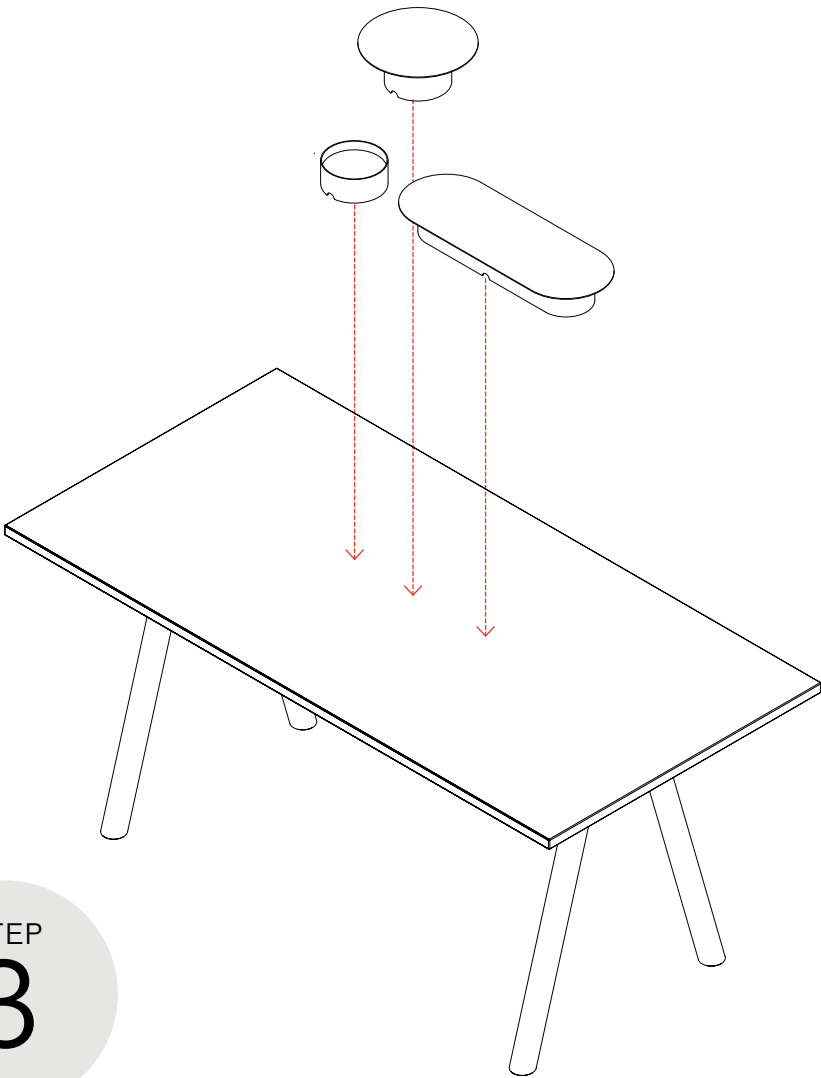

STEP
3