


Assembly Instructions Ped

			
PED650DL	PED650SL	PED650D	PED650S
W 650 D 650 H 450 MM W 25.5 D 25.5 H 17.5 INCH	W 650 D 650 H 450 MM W 25.5 D 25.5 H 17.5 INCH	W 650 D 650 H 750 MM W 25.5 D 25.5 H 29.5 INCH	W 650 D 650 H 750 MM W 25.5 D 25.5 H 29.5 INCH
			
PED850D	PED850S	PED1050D	PED650DH
W 850 D 850 H 750 MM W 33.5 D 33.5 H 29.5 INCH	W 850 D 850 H 750 MM W 33.5 D 33.5 H 29.5 INCH	W 1050 D 1050 H 750 MM W 41.5 D 41.5 H 29.5 INCH	W 650 D 650 H 1000 MM W 25.5 D 25.5 H 39.5 INCH
			
PED650SH			
W 650 D 650 H 1000 MM W 25.5 D 25.5 H 39.5 INCH			


! A cordless drill can be used to connect all the fixings in place but they must be finished off by fully tightening with a hand tool.

		
TX30 BIT	X1	X4
		
		X4
		M6X16TXCS


1

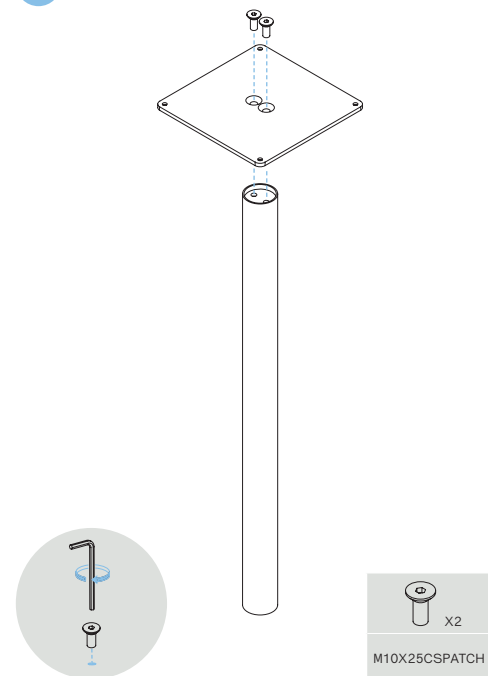

2

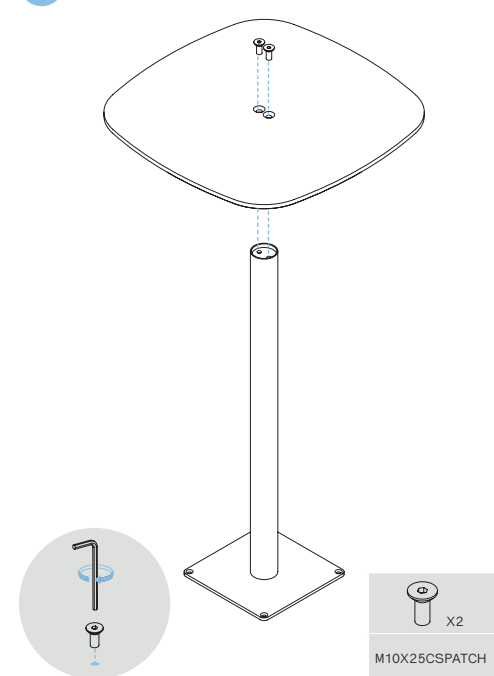

3

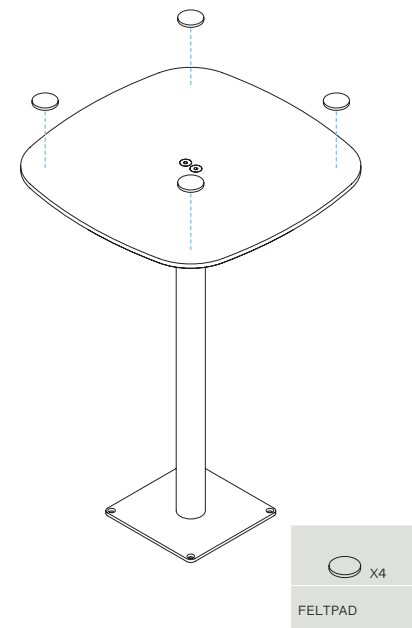

4

