



Assembly Instructions Pullman Booth




PULB2H

W 1950 D 1300 H 1300 MM
W 77 D 51 H 51 INCH




PULB3H

W 1950 D 1900 H 1300 MM
W 77 D 75 H 51 INCH



PULBW2H




W 2250 D 1300 H 1300 MM
W 88.5 D 51 H 51 INCH









PULBW3H






W 2250 D 1900 H 1300 MM
W 88.5 D 75 H 51 INCH

1

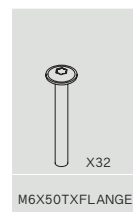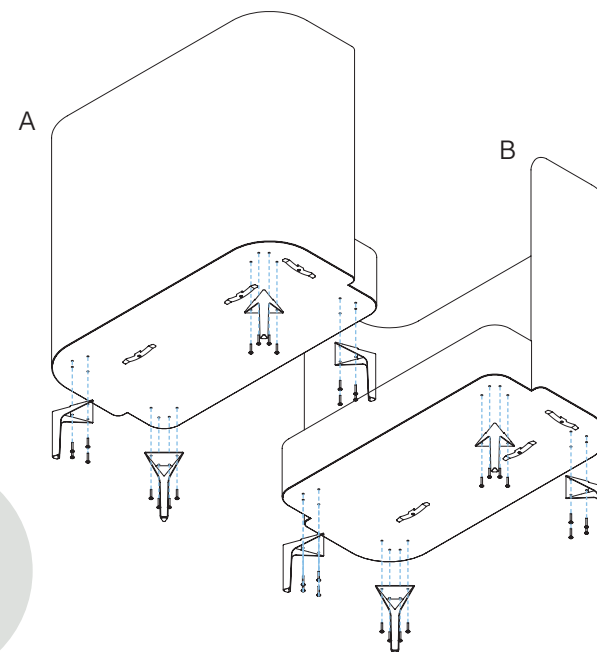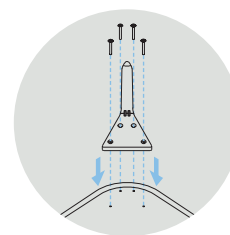


2

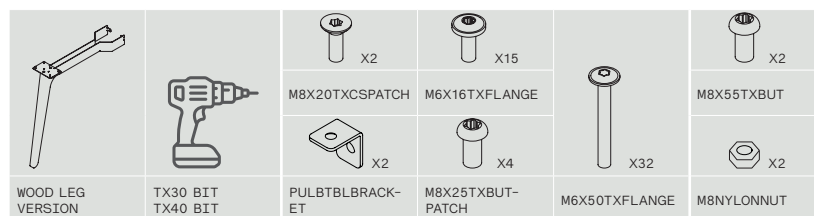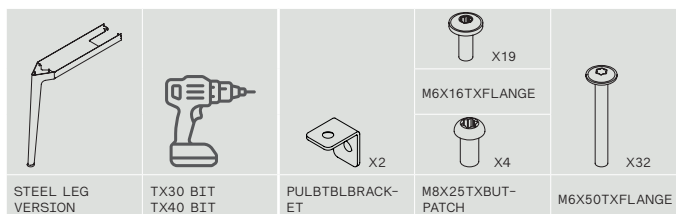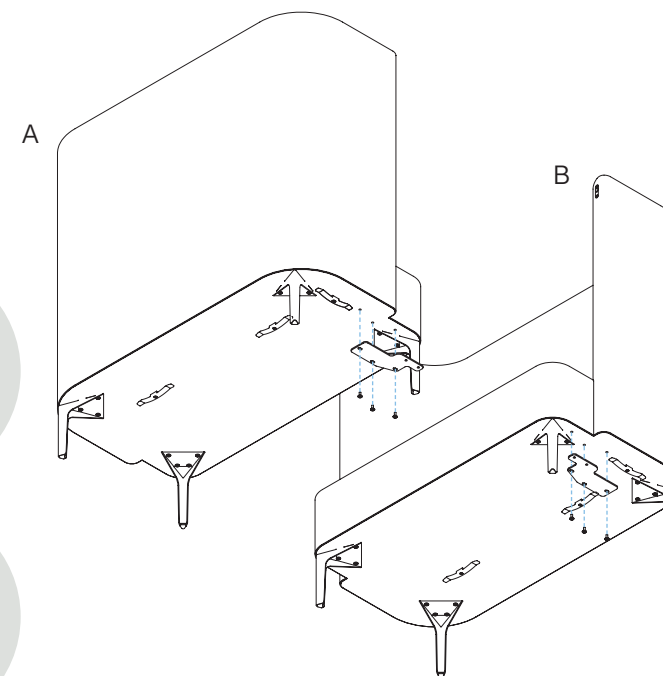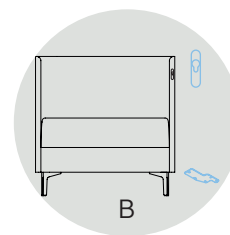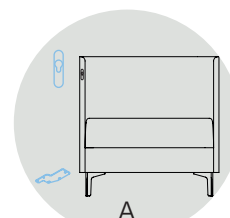

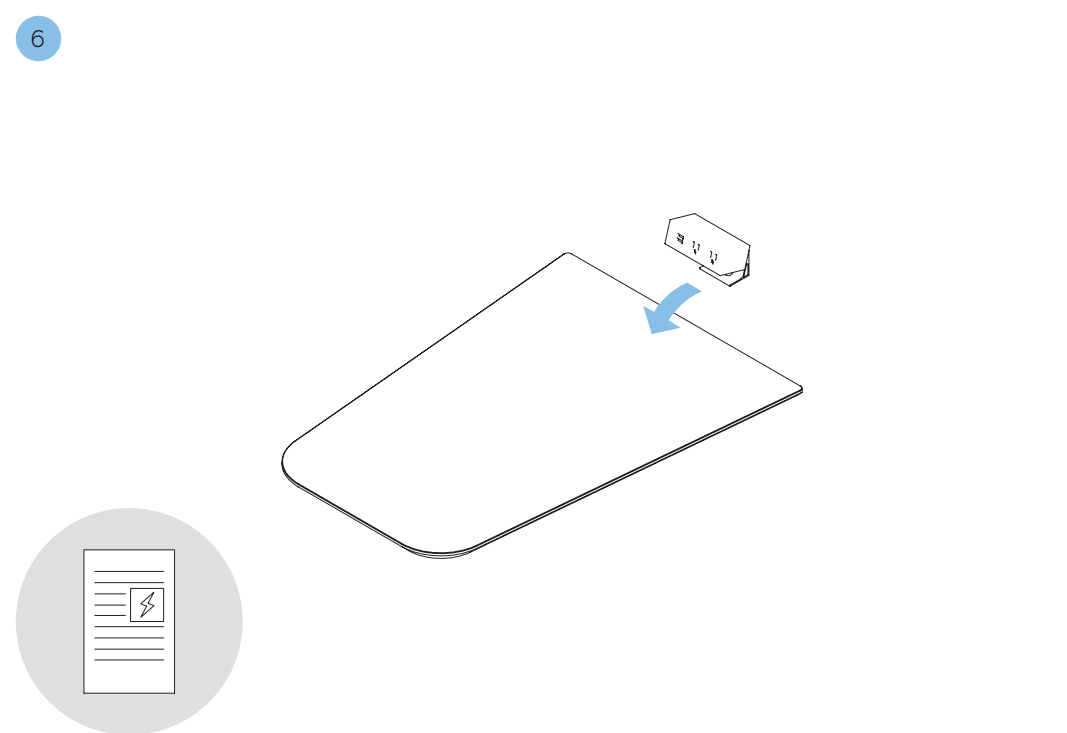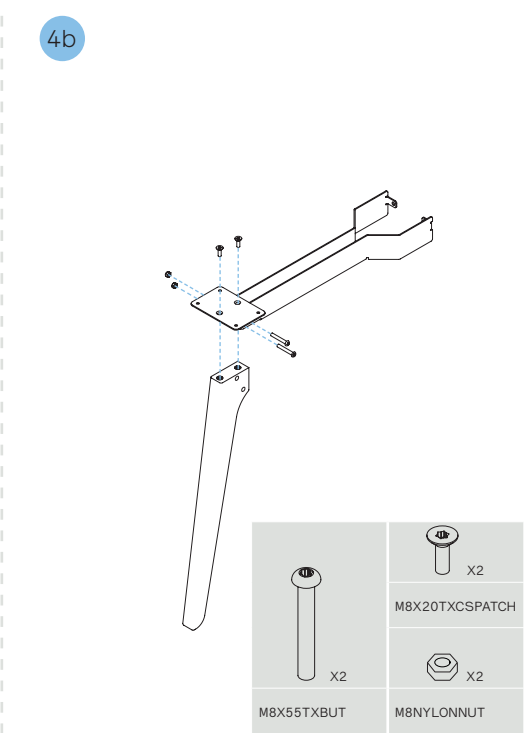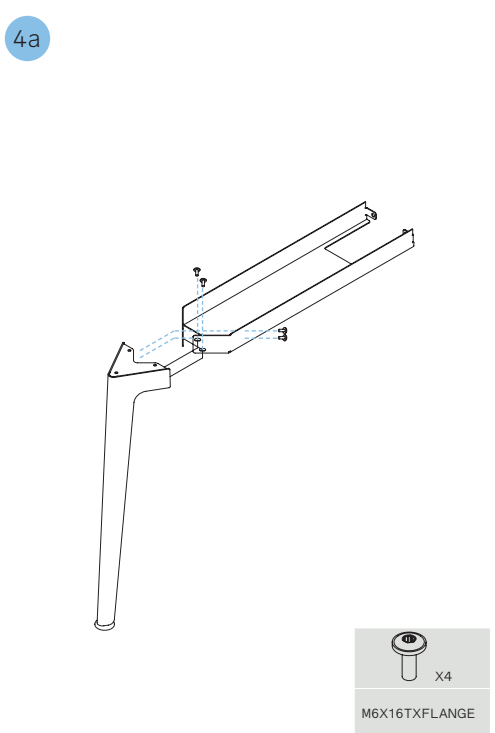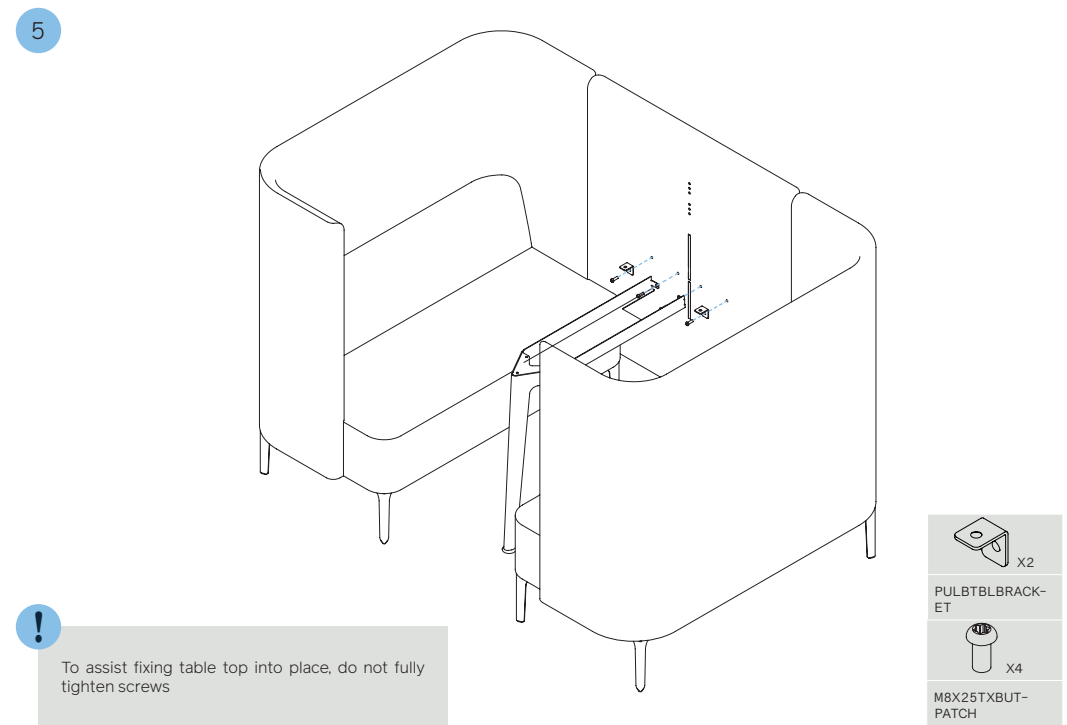
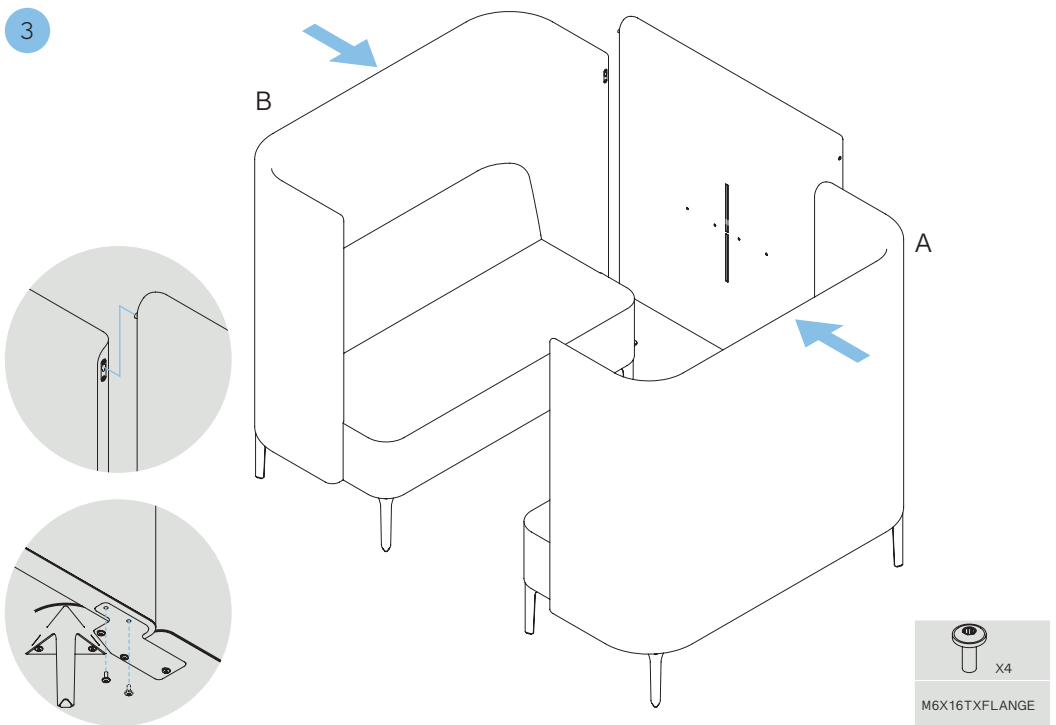


7

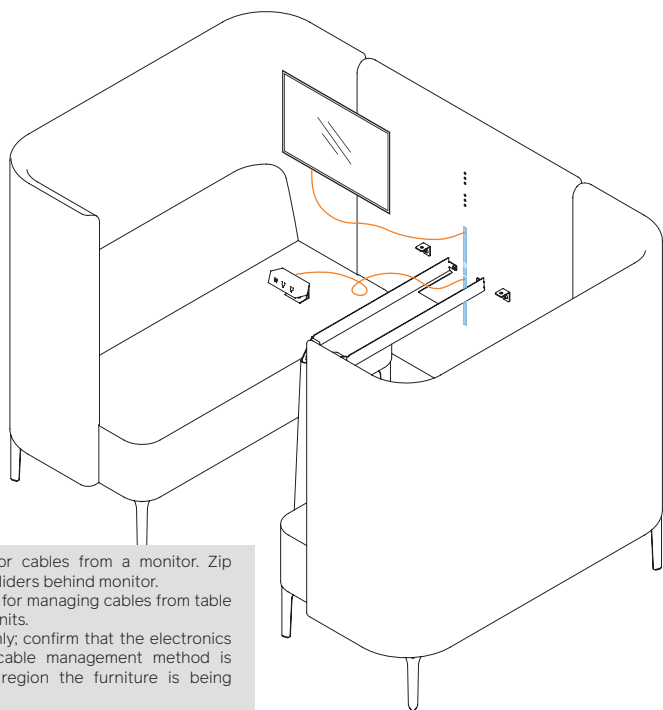

The top zip is for cables from a monitor. Zip upwards to hide sliders behind monitor.
The bottom zip is for managing cables from table mounted power units.
This is a guide only; confirm that the electronics installation and cable management method is suitable for the region the furniture is being installed.

9

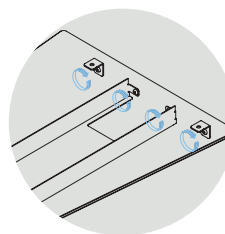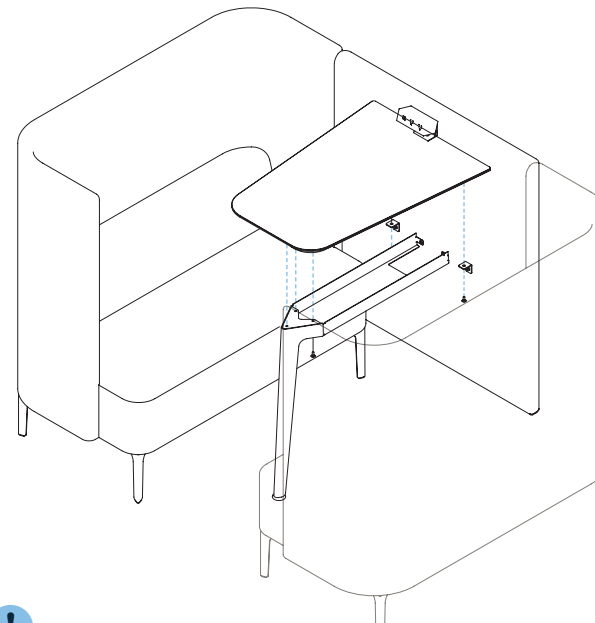


Once top is secure, fully tighten fixings from the table support frame and 'L' brackets to the upholstered screen.



X6



M6X16TXFLANGE

8

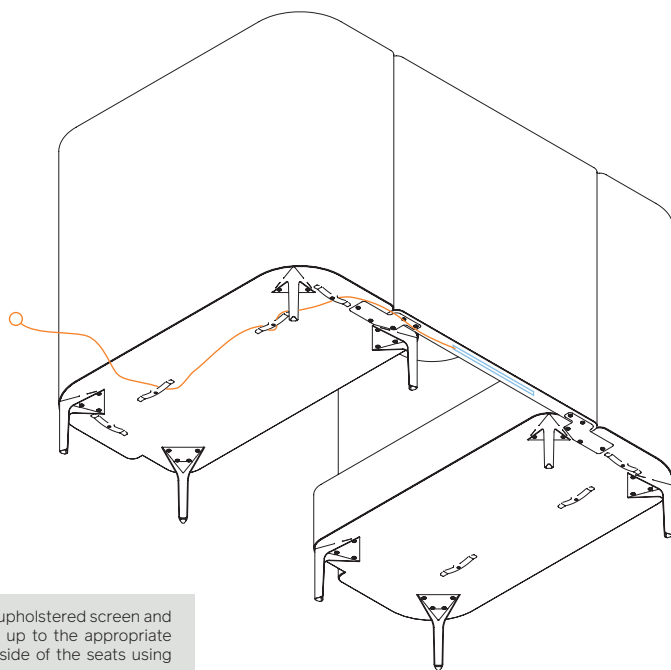

Open zip on underside of upholstered screen and route cables through. Zip up to the appropriate side, secure to the underside of the seats using clips provided.

10

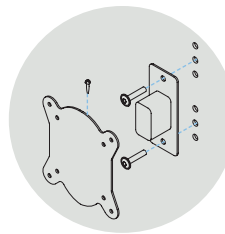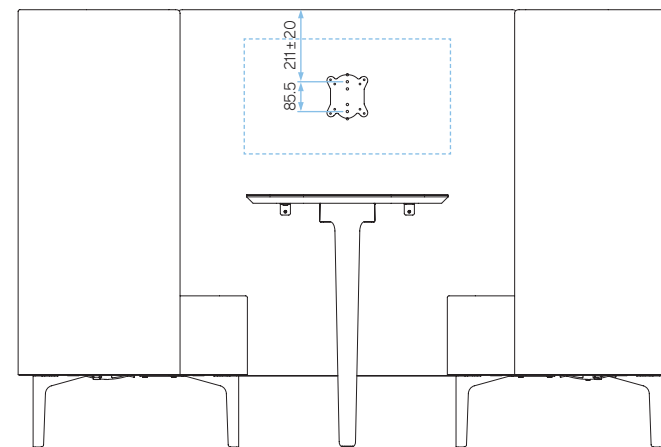

In upholstered screen, find the monitor mount holes with a small screwdriver. Take care not to damage seam thread. There are 3 possible attachment positions. Adjust height of monitor by using alternative fixing position.



X2

M6X30TXFLANGE