



Assembly Instructions
Morse Circular Table

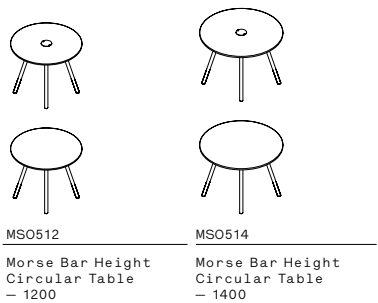

ASSEMBLY STEPS

- 1 Build Table
- 2 Basket Options
- 3 Add Power and Data to Basket
- 4 Add Basket to Table Top
- 5 Cable layouts

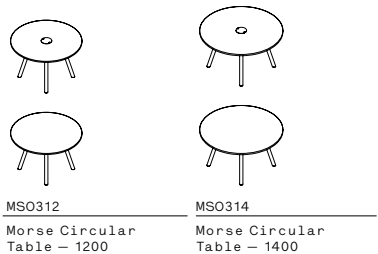

2 X PEOPLE



TX30 BIT




HEX4KEY OR BIT



#8 POZIDRIV SCREWDRIVER

Build Table
Morse Circular Table

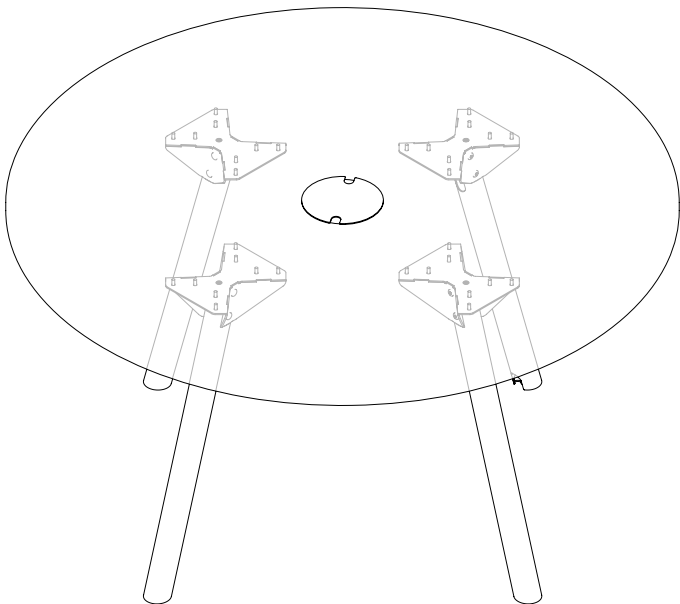

STEP
1



TX30 BIT



HEX4KEY OR BIT



X8

M6X50CARRIAGEBL



X4

M6X20TXCSPATCH







X32

M6X16TXFLANGE



X8

M6X12MUSHCAPNUTBL

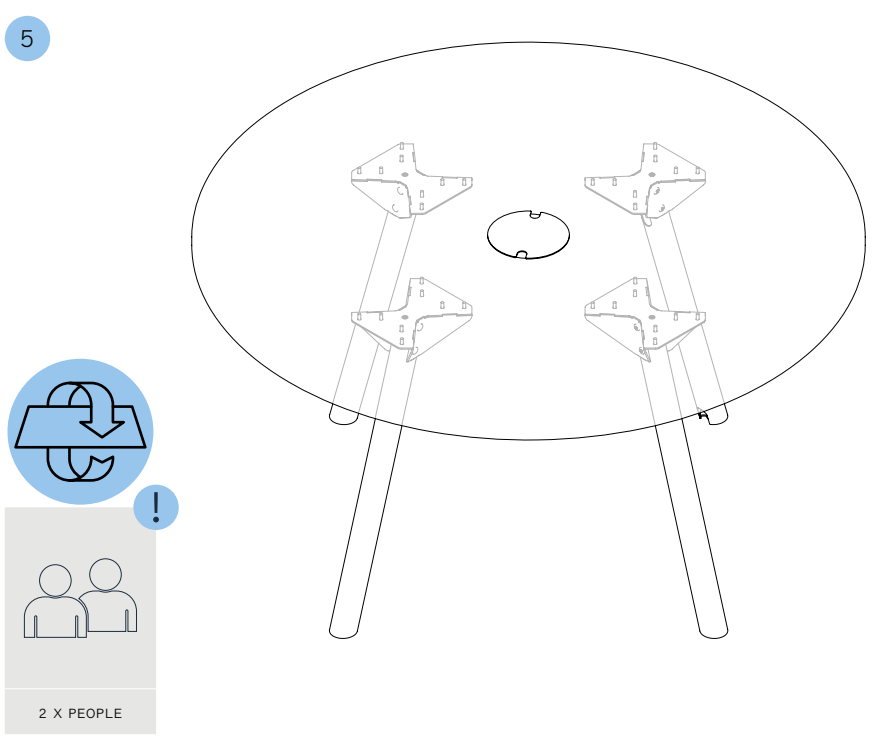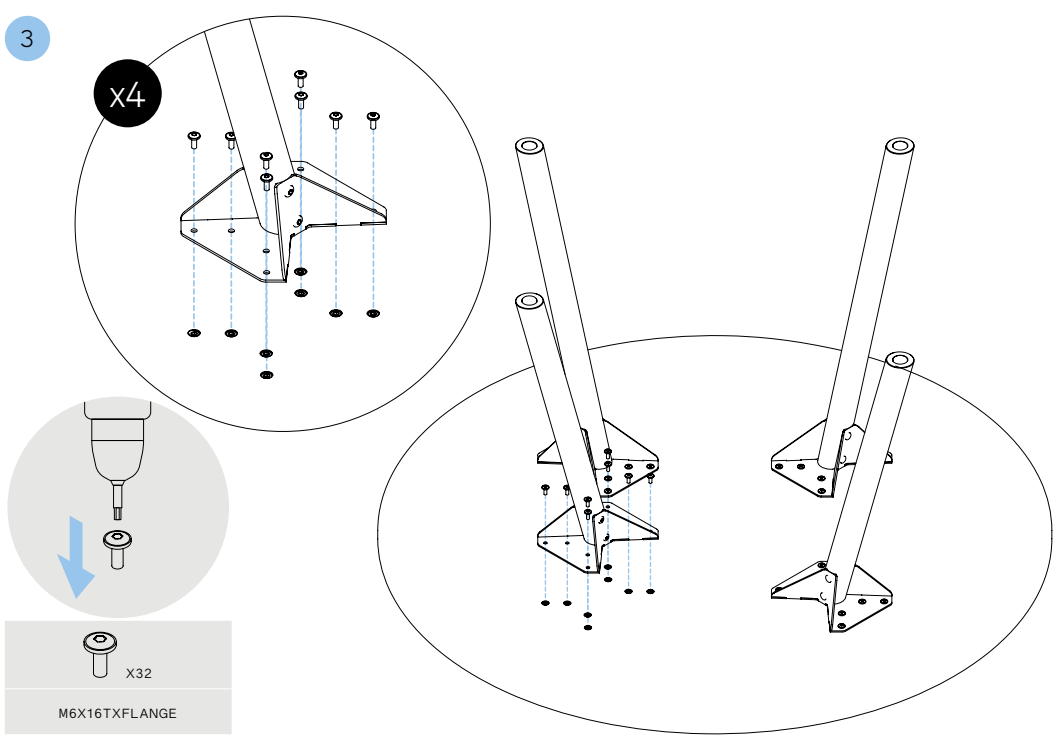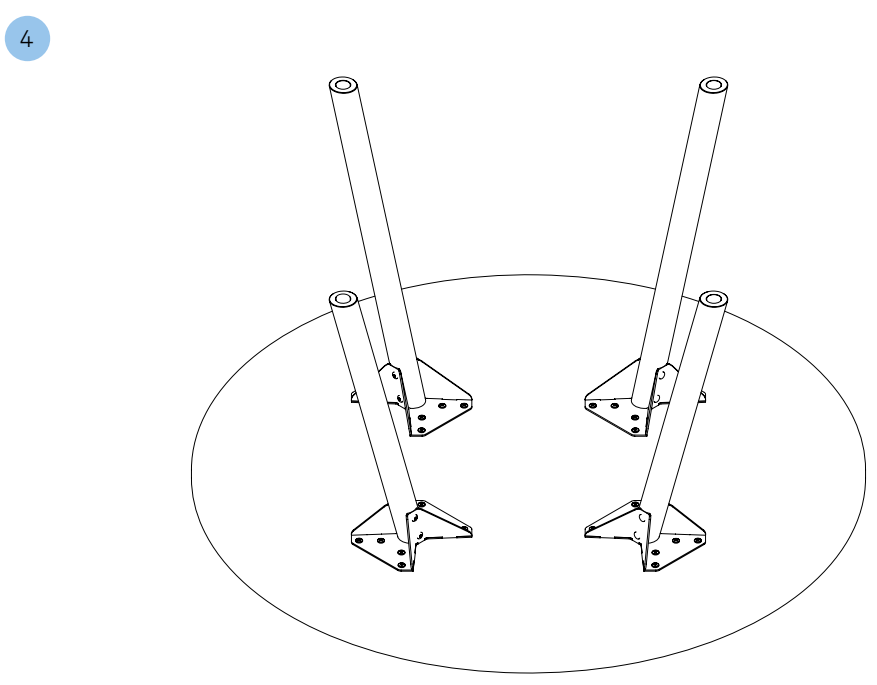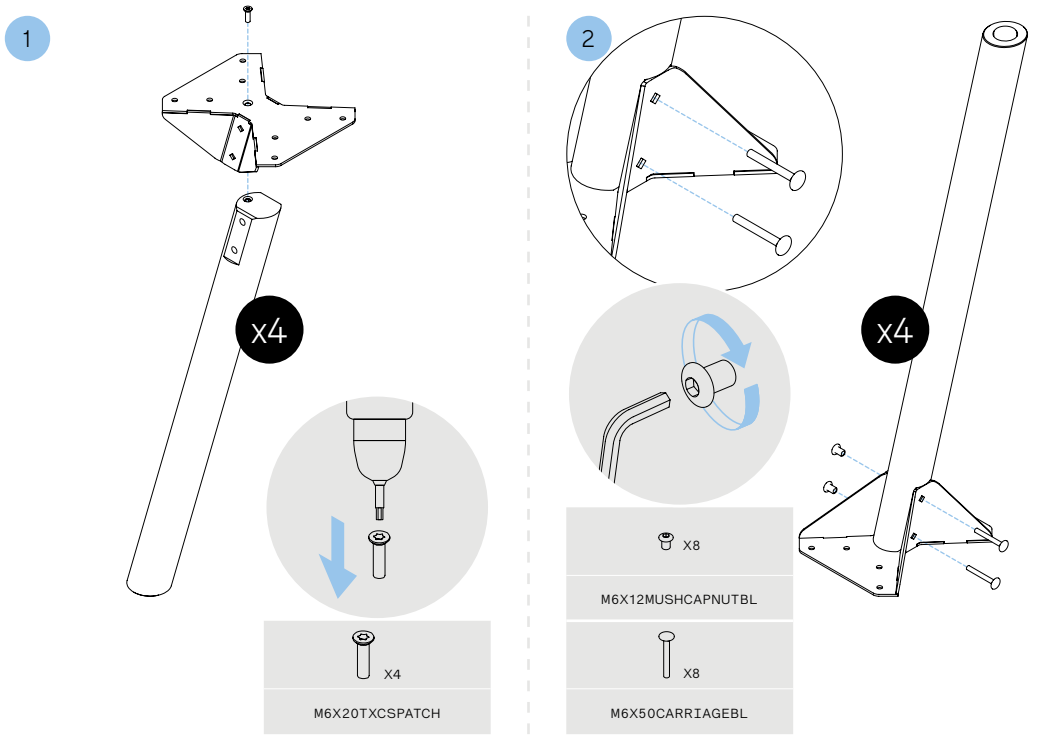



Basket Options

Morse Circular Table



MS0312
Morse Circular Table
— 1200

Single Basket

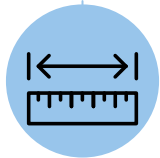
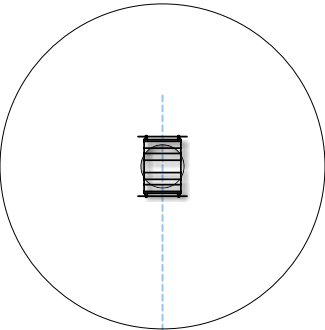


STEP
2




MS0314
Morse Circular Table
— 1400

Short Basket

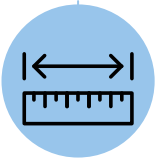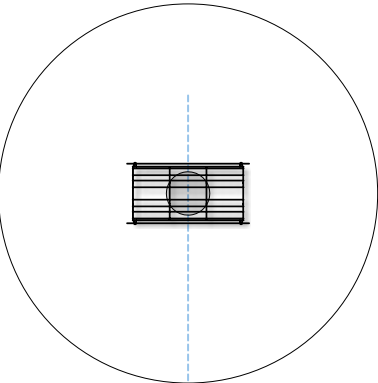


Add Power & Data to Basket


Morse Circular Table

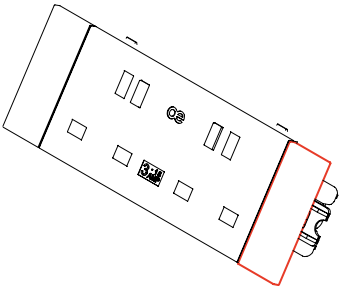



1

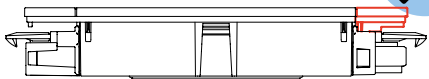


2

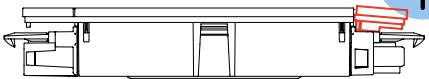




3

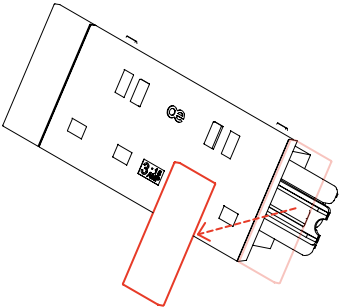


STEP
3

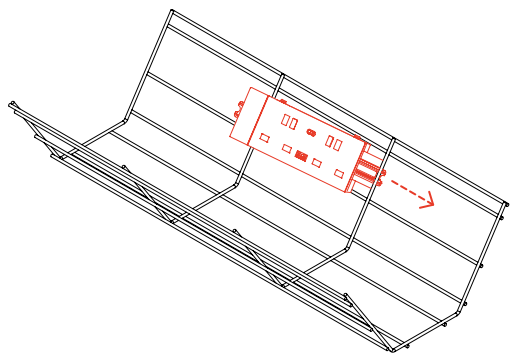



4

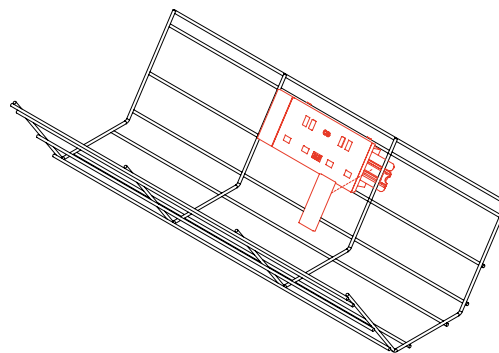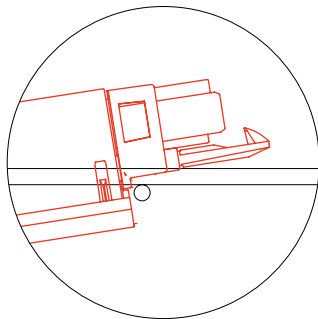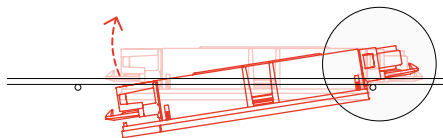



7




8

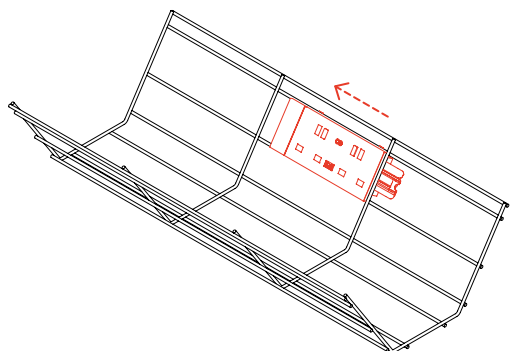


5

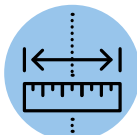


6

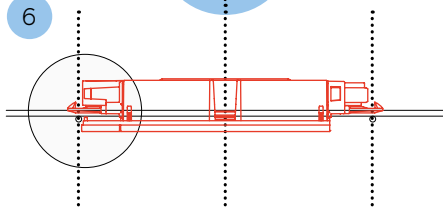


9

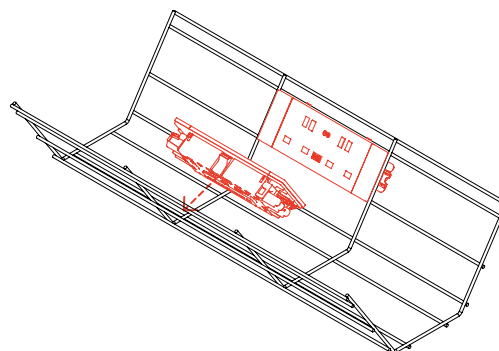

10

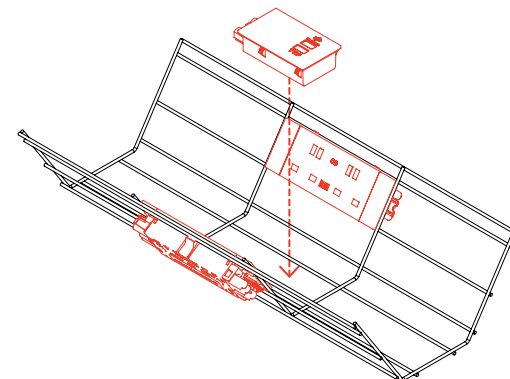


Add Basket to Table Top Morse Circular Table

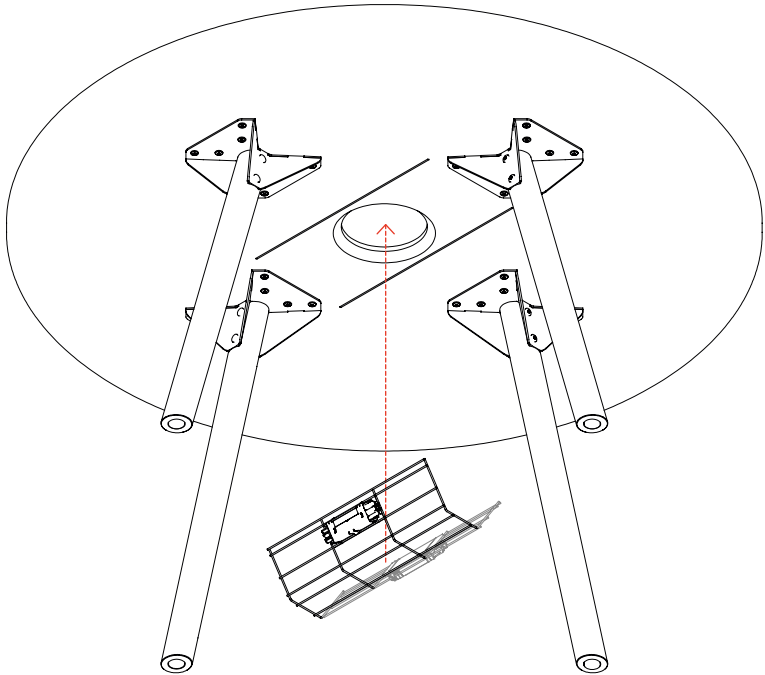


STEP
4




	 X4
	PCLIP48ALU
	 X4
#8 POZIDRIV SCREWDRIVER	4X16PANWOODSCREW

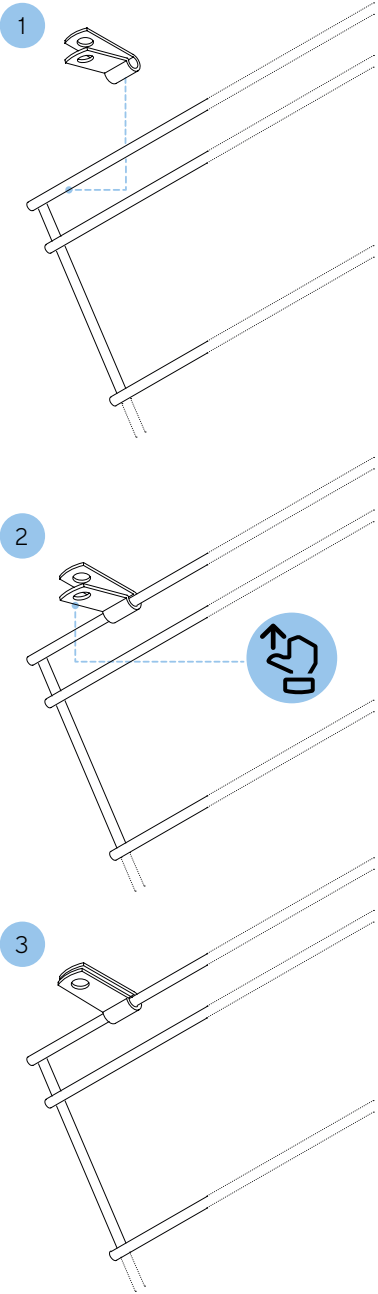

 X4
PCLIP48ALU

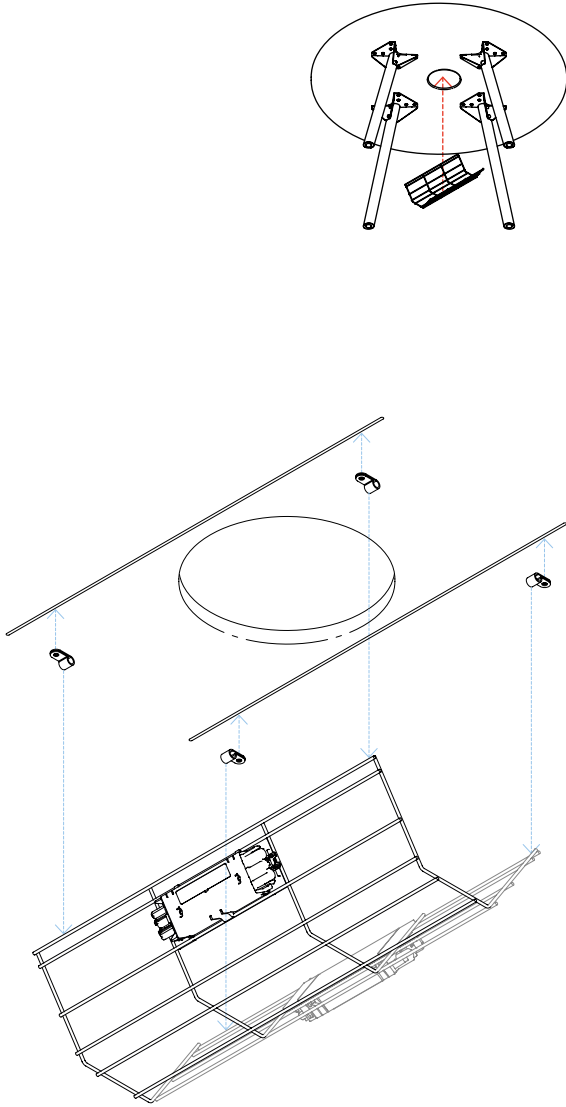


4

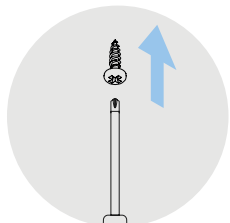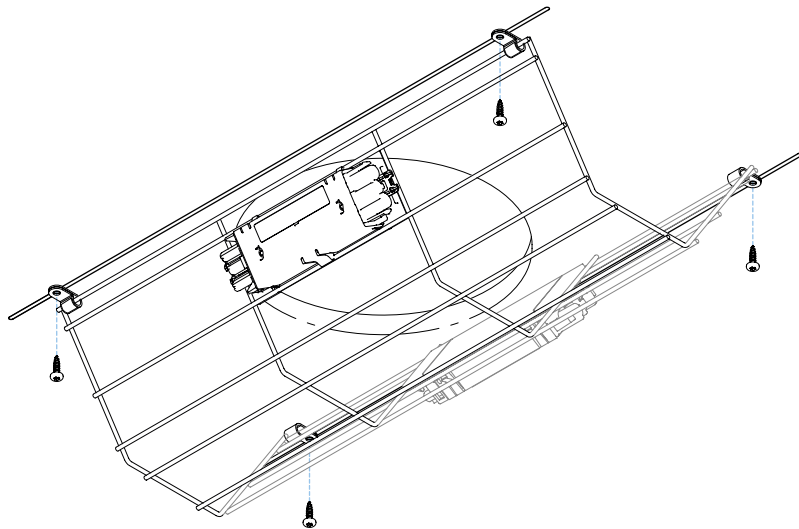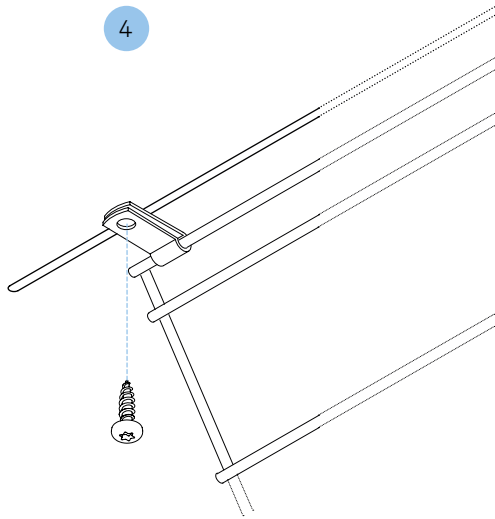


X4

4X16PANWOODSCREW

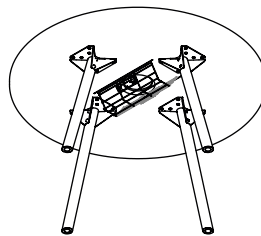

Cable layouts Morse Circular Table

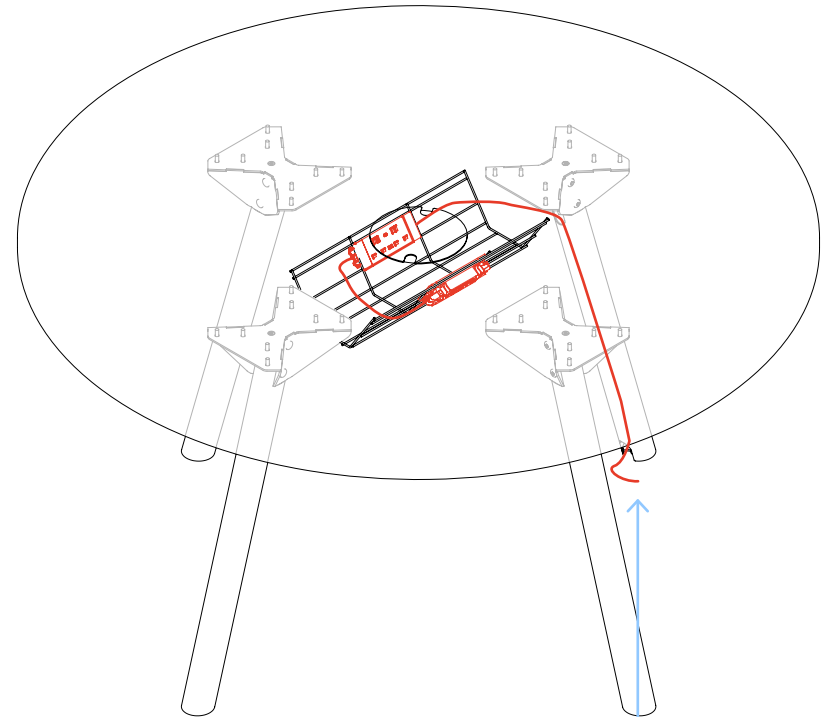

1

Cable Managed
Leg can be placed
in any location

STEP

5